PERFECT HEAT.

# THE PROFESSIONAL CS COOKTOP

Parts List

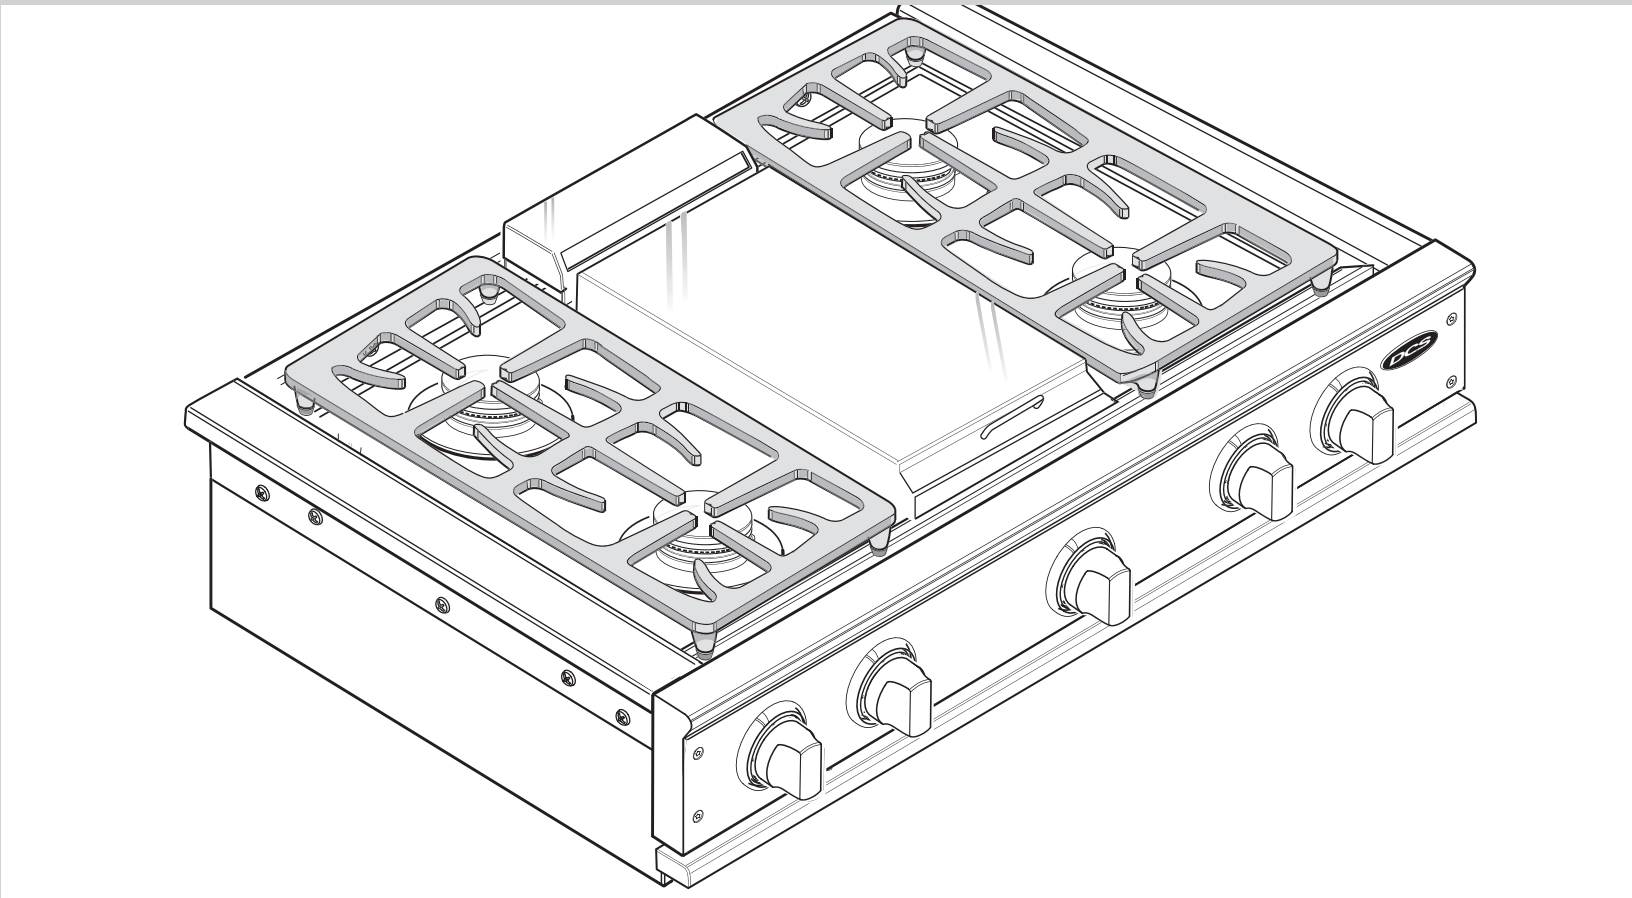

**MODELS:**

CS-484GG
CS-486GL
CS-486GD
CS-485GD
CS-366
CS-364GL
CS-364GD

# A MESSAGE TO OUR CUSTOMERS

*DCS is a leading manufacturer of premium quality cooking and specialty appliances for both residential and professional use. We are proud of our reputation for quality and our commitment to customer satisfaction. We have set high standacs for ourselves along with our network of independent Part Distributors and Service Agencies. As an Authorized Part Distributor or Authorized Service Agency we are counting on you to represent our company in a professional manner. We are here to help support you should you need assistance. Our technical support center is staffed by experienced technicians eager to help you. Your questions can be answered by DCS Customer Care Center by phone: 1-888-281-5698, email: support@dcsappliances.com, or by mail:*

*DCS*
*Attention: Customer Care Center*
*5800 Skylab Road*
*Huntington Beach, CA 92647*

*www.dcsappliances.com*

## ⚠ *WARNING*

***If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.***

## ⚠ *WARNING*

***To reduce the risk of injury to persons in the event of a rangetop grease fire, observe the following: Turn burner off first. Smother flames with a close-fitting lid, cookie sheet, or metal tray. Be careful to prevent burns. If the flames do not go out immediately evacuate and call the fire department. Never pick up a flaming pan - You may be burned. DO NOT USE WATER, including wet dishcloths or towels - a violent steam explosion will result. Use an extinguisher ONLY if:***

***1) You know you have a Class ABC extinguisher, and you already know how to operate it.***

***2) The fire is small and contained in the area where it started.***

***3) The fire department is being called.***

***4) You can fight the fire with your back to an exit.***

## *FOR YOUR SAFETY*

***If You Smell Gas:***

- ***Do not try to light any appliance.***
- ***Do not touch any electrical switch; do not use any phone in your building.***
- ***Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.***
- ***If you cannot reach your gas supplier, call the fire department.***
- ***Installation and service must be performed by a qualified installer, service agency or the gas supplier.***

**PLEASE RETAIN THIS MANUAL FOR FUTURE REFERENCE.**

# TABLE OF CONTENTS


**SAFETY PRACTICES** ..... 3-5

**PARTS LIST** ..... 6-43

**CS 48** ..... 6-19
CS-48 Burner Assembly ..... 6
CS-485 Burner Assembly ..... 7
CS-48 Grill and Griddle ..... 8
CS-485 GrIddle Assembly ..... 9
Manifold Assembly ..... 10-13
Structure Assembly ..... 14-17

**CS 36** ..... 18-25
CS-36 Burner Assembly ..... 18
CS-36 Grill and Griddle ..... 19
Manifold Assembly ..... 20-22
Structure Assembly ..... 23-25

# SAFETY PRACTICES & PRECAUTIONS

When properly cared for, your new DCS Appliance has been designed to be a safe, reliable cooking appliance. When using this restaurant caliber appliance, use it with extreme care, as this type appliance provides intense heat and can increase the accident potential. Basic safety precautions must be followed when using kitchen appliances, including the following:

- Read this Service Manual thoroughly before using your new appliance. This will help to reduce the risk of fire, electric shock, or injury to persons.
- Begin by insuring proper installation and servicing. Follow the installation instructions which came with this appliance. Be sure to have a qualified technician install and ground this appliance before using.
- Have the installer show you where the gas supply shutoff valve is located so you will know how and where to turn off the gas to the appliance.
- If you smell gas, the installer has not done a proper job of checking for leaks. You can have a small leak and therefore a faint gas smell if the connections are not completely tight. Finding a gas leak is not a "do-it-yourself" procedure. Some leaks can only be found with the burner control in the ON position and for your protection it must be done by a qualified service technician.

***WARNING:***

***Gas leaks may occur in your system and result in a dangerous situation. Gas leaks may not be detected by smell alone. Gas suppliers recommend you purchase and install an UL approved gas detector. Install and use in accordance with the manufacturer's instructions.***

- If by some chance a burner goes out and gas escapes, open a window or a door to let the room air out. Do not attempt to use the appliance until the gas has had time to dissipate. Follow the instructions on page 1, "For your safety – if you smell gas".
- This appliance has been factory assembled for natural or LP gas. It should be correctly adjusted from the factory for the type of gas that is used.
- Do not repair or replace any part of this appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Children should not be left alone or unattended in an area where appliances are in use. They should never be allowed to turn knobs, push buttons, sit or stand on any part of an appliance.
- Children in walkers, or children crawling can be attracted to the round oven door handle and may grab and open the oven door. This can result in injury from the door being pulled open on a child, or severe burns if the oven is in use and hot.

***WARNING:***

***Do not store items of interest to children above or at the back of any appliance. Children could be seriously injured if they should climb onto the appliance to reach these items.***

- Never store anything in the oven or on the cooktop. Flammable materials can catch fire, plastic items may melt or ignite and other types of items could be ruined.
- Do not hang articles from any part of the appliance or place anything against the oven. Some fabrics are quite flammable and may catch on fire.
- If the appliance is near a window be certain the curtains do not blow over or near the cooktop burners; they could catch on fire.
- Do not use water on grease fires. Turn all burners OFF, then smother fire with baking soda or use a dry chemical or foam-type fire extinguisher.
- Never let clothing, pot holders, or other flammable materials come in contact with, or too close to, any burner or burner grate until it has cooled. Fabric may ignite and result in personal injury.
- Be certain to use only dry pot holders: moist or damp pot holders on hot surfaces may cause burns from steam. Do not use a towel or other bulky cloth in place of pot holders. Do not let pot holders touch hot burners, or burner grates.
- For personal safety, wear proper apparel. Loose fitting garments or hanging sleeves should never be worn while using this appliance. Some synthetic fabrics are highly flammable and should not be worn while cooking.
- Do not use aluminum foil to line any part of the oven or cooktop. Using a foil liner could result in a fire hazard, or the obstruction of the flow of combustion and ventilation air. Foil is an excellent heat insulator and heat will be trapped underneath it. This trapped

# SAFETY PRACTICES & PRECAUTIONS

heat can upset the cooking performance and can damage the finish of the oven or the cooktop parts.

***WARNING:***

***This appliance is for cooking. Based on safety considerations, never use the oven or cooktop to warm or heat a room. Also, such use can damage the cooktop or oven parts.***

- When using the cooktop: Do not touch the burner grates or the immediate surrounding area. Areas adjacent to the burners may become hot enough to cause burns.
- When using the oven: Do not touch the interior surfaces of the oven, the exterior area immediately surrounding the door or the back trim. The surfaces directly above the oven door may be hot if the oven has been operated with the door open, or if something has prevented the door from sealing.
- Never leave the cooktop unattended when using high flame settings. Boil overs cause smoking and greasy spill overs that may ignite. More importantly, if the burner flames are smothered by a severe boil over which effects the igniter, unburned gas will escape into the room.
- Only certain types of glass, heat-proof glass-ceramic, ceramic, earthen ware, or other glazes utensils are suitable for cooktop use. This type of utensil may break with sudden temperature changes. Use only on low or medium flames settings according to the manufacturer's directions.
- Do not heat unopened food containers; a build up of pressure may cause the container to burst.
- During cooking, set the burner control so that the flame heats only the bottom of the pan and does not extend beyond the bottom of the pan. This could heat and/or melt the handles.
- Always use utensils that have flat bottoms large enough to cover the burner. The use of undersized utensils will expose a portion of the flame to direct contact and may result in ignition of clothing.
- To minimize burns, ignition of flammable materials and unintentional spill overs, position handles of utensils inward so they do not extend over adjacent work areas, cooking areas, or the edge of the cooktop.
- Hold the handle of the pan to prevent movement of the utensil when stirring or turning food.
- Grease Is Flammable. Let hot grease cool before attempting to handle it. Avoid letting grease deposits collect around the cooktop burners. Clean after each use or boil over.
- For proper lighting and performance of the cooktop burners, keep the burner ports clean. It may be necessary to clean these when there is a boil over or when the burner does not light, even though the electronic igniters click.
- Clean the cooktop with caution. Avoid steam burns; do not use a wet sponge or cloth to clean the cooktop while it is hot. Some cleaners produce noxious fumes if applied to a hot surface. Follow directions provided by the cleaner manufacturer.
- Be sure all the range and/or cooktop controls are turned off and the appliance is cool before using any type of aerosol cleaner on or around the appliance. The chemical that produces the spraying action could, in the presence of heat, ignite or cause metal parts to corrode.
- Place oven racks in desired position while the oven is cool. If a rack must be moved while the oven is hot, do not let the pot holders contact the hot interior of the oven.
- Use care when opening the oven door; let hot air or steam escape before removing or replacing foods.
- Do not rub, damage, move or remove the door gasket. It is essential for a good seal during baking.
- Clean the ventilator hood and filters above the range or cooktop frequently so grease from cooking vapors does not accumulate on them.
- Turn the ventilator OFF in case of fire or when intentionally "flaming" liquor or other spirits on the cooktop. The blower, if in operation, could unsafely spread the flames.
- DO NOT obstruct the flow of combustion or ventilation air to the appliance. Be sure a fresh air supply is available.
- For safety reasons and to avoid damage to the appliance never sit, stand, or lean on the oven door or cooking surface.
- Service should only be done by authorized technicians. Technicians must disconnect the power supply before servicing this appliance.

# SAFETY PRACTICES & PRECAUTIONS

***WARNING:***

***California Proposition 65 - The burning of gas cooking fuel generates some by-products which are known by the State of California to cause cancer or reproductive harm. California law requires businesses to warn customers of potential exposure to such substances. To minimize exposure to these substances, always operate this unit according to the instructions contained in this booklet and provide good ventilation to the room when cooking with gas.***

# CS-48 BURNER ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 12266-01 | GRATE |
| 1a | 12278-01 | GRATE CENTER |
| 2 | K-14355 | FEET KIT |
| 3 | 12272 | D BURNER CAP |
| 4 | 12274 | D PORT RING |
| 5 | 15219 | VENTURI NUT |
| 6 | 12270 | D SIMMER RING |
| 7 | 13378 | VENTURI |
| 8 | 12304 | D BURNER BASE ASSY. |
| 9 | 91545-PC | VOLCANO |
| 10 | 91925-02 | TUBING,FRONT SIMMER |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 11 | 91925-01 | TUBING, MAIN FRONT |
| 12 | 91925-04 | TUBING, SIMMER REAR |
| 13 | 91925-03 | TUBING, MAIN REAR |
| 14 | 12254-02 | LOW JET HOLDER LP |
| | 12254-01 | LOW JET HOLDER NAT |
| 15 | 12200-09 | DUAL FLOW JET HOLDER |
| 16 | 15185 | SIMMER JET HOLDER NUT |
| 17 | 12150 | JET HOLDER NUT |
| 18 | 91761 | BURNER HANGER |
| 19 | 91727 | COOKTOP SUPPORT |
| 20 | 15001-19 | SCREW, SUPPORT |
| 21 | K-12283 | ELECTRODE |

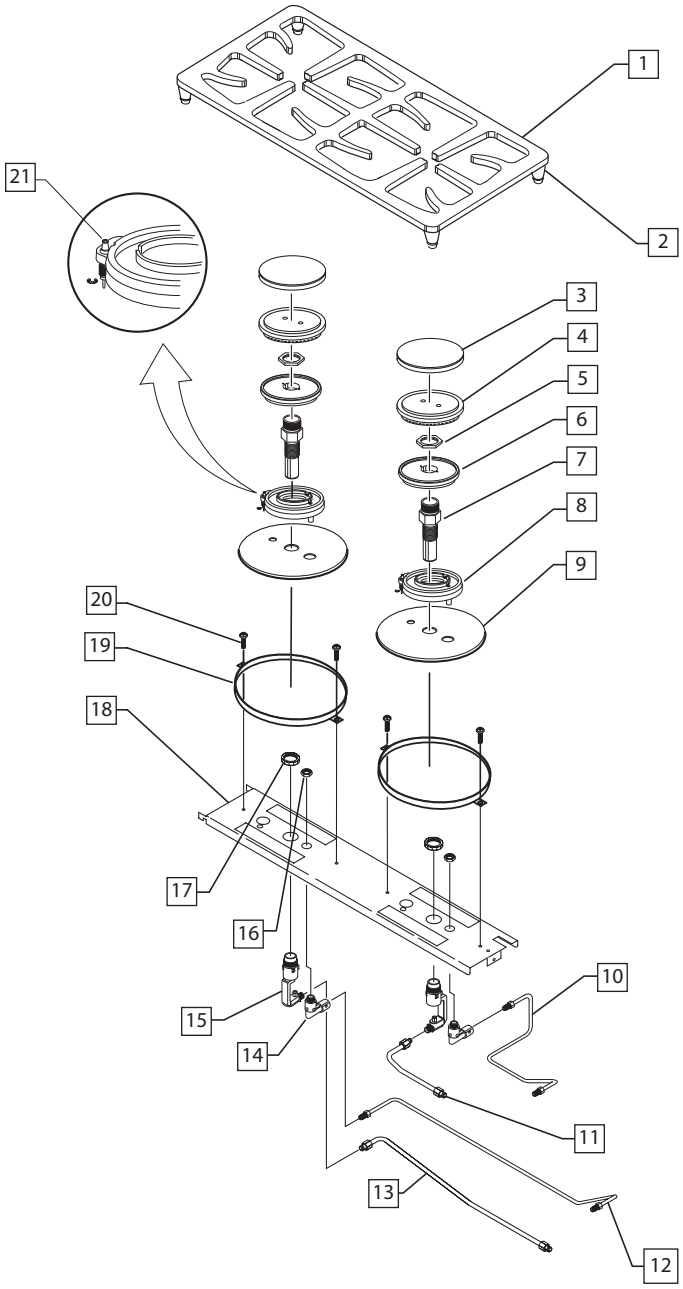

# CS-485 BURNER ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 12272 | D BURNER CAP |
| 2 | 12274 | D PORT RING |
| 3 | 15219 | VENTURI NUT |
| 4 | 12270 | D SIMMER RING |
| 5 | 13378 | VENTURI |
| 6 | 12304 | D BURNER BASE ASSY. |
| 7 | 91545-PC | VOLCANO |
| 8 | 12200-10 | JET HOLDER MAIN CTR 16K |
| 9 | 12200-09 | JET HOLDER MAIN 17.5K |
| 10 | 91994-05 | TUBING, MAIN REAR R/H |
| 11 | 91994-06 | TUBING, SIMMER REAR R/H |
| 12 | 91994-04 | TUBING, SIMMER FRONT R/H |
| 13 | 91994-03 | TUBING, MAIN FRONT R/H |
| 14 | 91994-01 | TUBING, MAIN CTR |
| 15 | 91994-02 | TUBING, SIMMER CTR |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 16 | 91925-01 | TUBING SIMMER FRONT L/H |
| 17 | 91925-03 | TUBING MAIN REAR L/H |
| 18 | 91925-04 | TUBING SIMM REAR L/H |
| 19 | 12254-01 | SIMMER JET HOLDER (NAT) |
| 20 | 91925-02 | TUBING, MAIN FRONT L/H |
| 21 | 12150 | JET HOLDER NUT |
| 22 | 15185 | NUT, SIMMER JET HOLDER |
| 23 | 91761 | BURNER HANGER |
| 24 | 91727 | SUPPORT,COOKTOP |
| 25 | 91228 | BURNER HANGER, CTR |
| 26 | 15001-19 | SCREW |
| 27 | K-12283 | ELECTRODE |
| 28 | 12262-01 | CENTER GRATE |
| 29 | 12261-01 | GRATE |
| 30 | K-14355 | GRATE FOOT KIT |

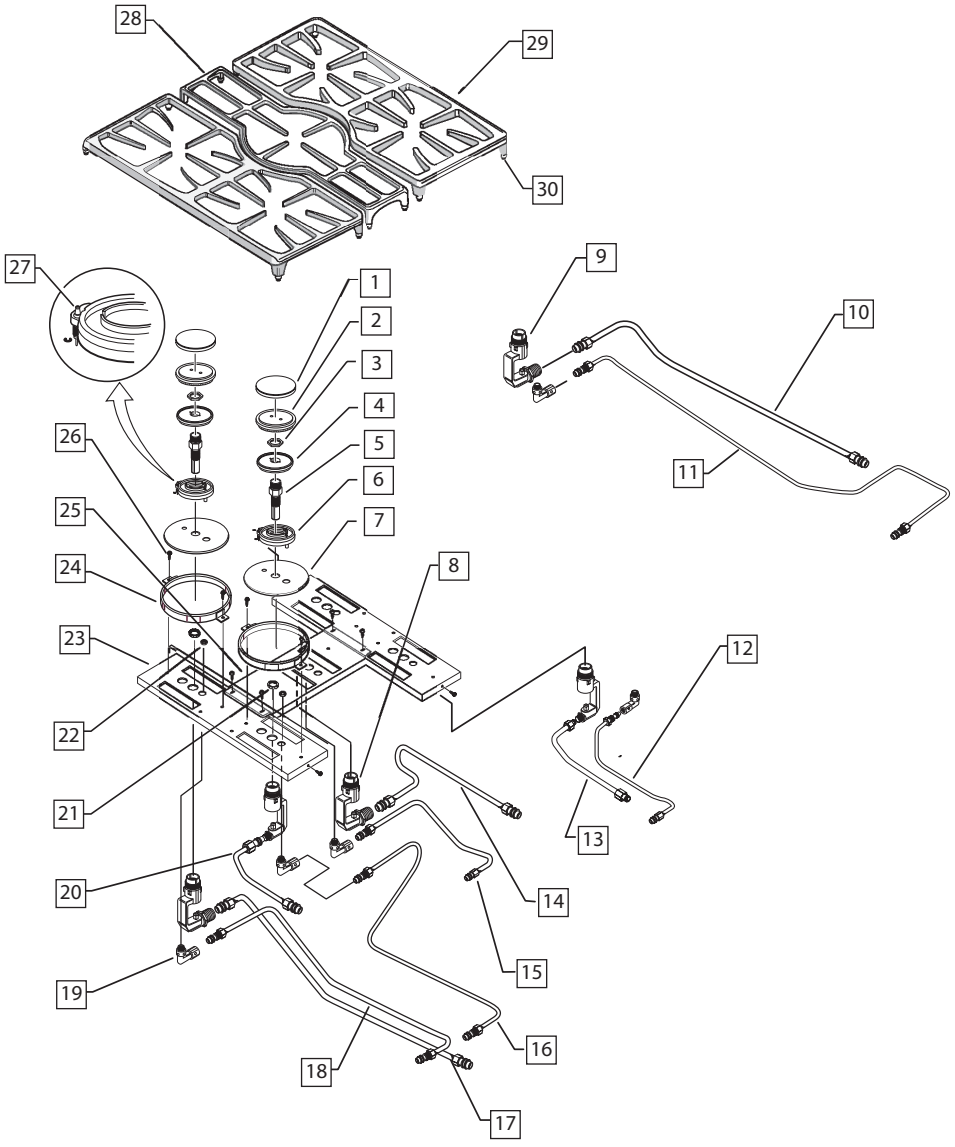

# CS-48 GRILL AND GRIDDLE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91899 | GRIDDLE FLUE COVER |
| 2 | 90253-02 | GRILL COVER ASSY. |
| 3 | 90133-01 | GRIDDLE ASSY |
| 4 | 15002-32 | SCREW, LEVELING |
| 5 | 90192-02 | GRIDDLE TRIM |
| 6 | 90142 | BRACKET, IGNITER GRIDDLE |
| 7 | 16009-1 | IGNITER- (SMALL) |
| 8 | 12005-1 | BROILER/GRIDDLE BURNER |
| 9 | 91776 | GRIDDLE BAFFLE |
| 10 | 90195 | GRIDDLE FRONT TRIM CHANNEL |
| 11 | 30313-3 | DRIP PAN |
| 12 | 91955-02 | TUBING, GRIDDLE |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 13 | 91955-01 | TUBING, GRILL |
| 14 | 90192-01 | GRILL & GRID FRONT TRIM TOP |
| 15 | 92014 | THERMAL VALVE BRACKET |
| 16 | 13073 | SINGLE THERMAL VALVE |
| 17 | 30313-3 | DRIP PAN |
| 18 | 90251 | GRILL IGNITER BRACKET |
| 19 | 90630 | GRILL BOX |
| 20 | 12289 | BURNER |
| 21 | 90075 | BURNER BRACKET |
| 22 | 96657 | RADIANT WELD ASSY. |
| 23 | 91447 | END CAP |
| 24 | 91483 | CERAMIC ROD TRAY ASSY. |
| 25 | 32224 | CERAMIC ROD |
| 26 | 12148 | CAST-IRON GRATE |
| 27 | 90254-02 | GRILL COVER ASSY. |

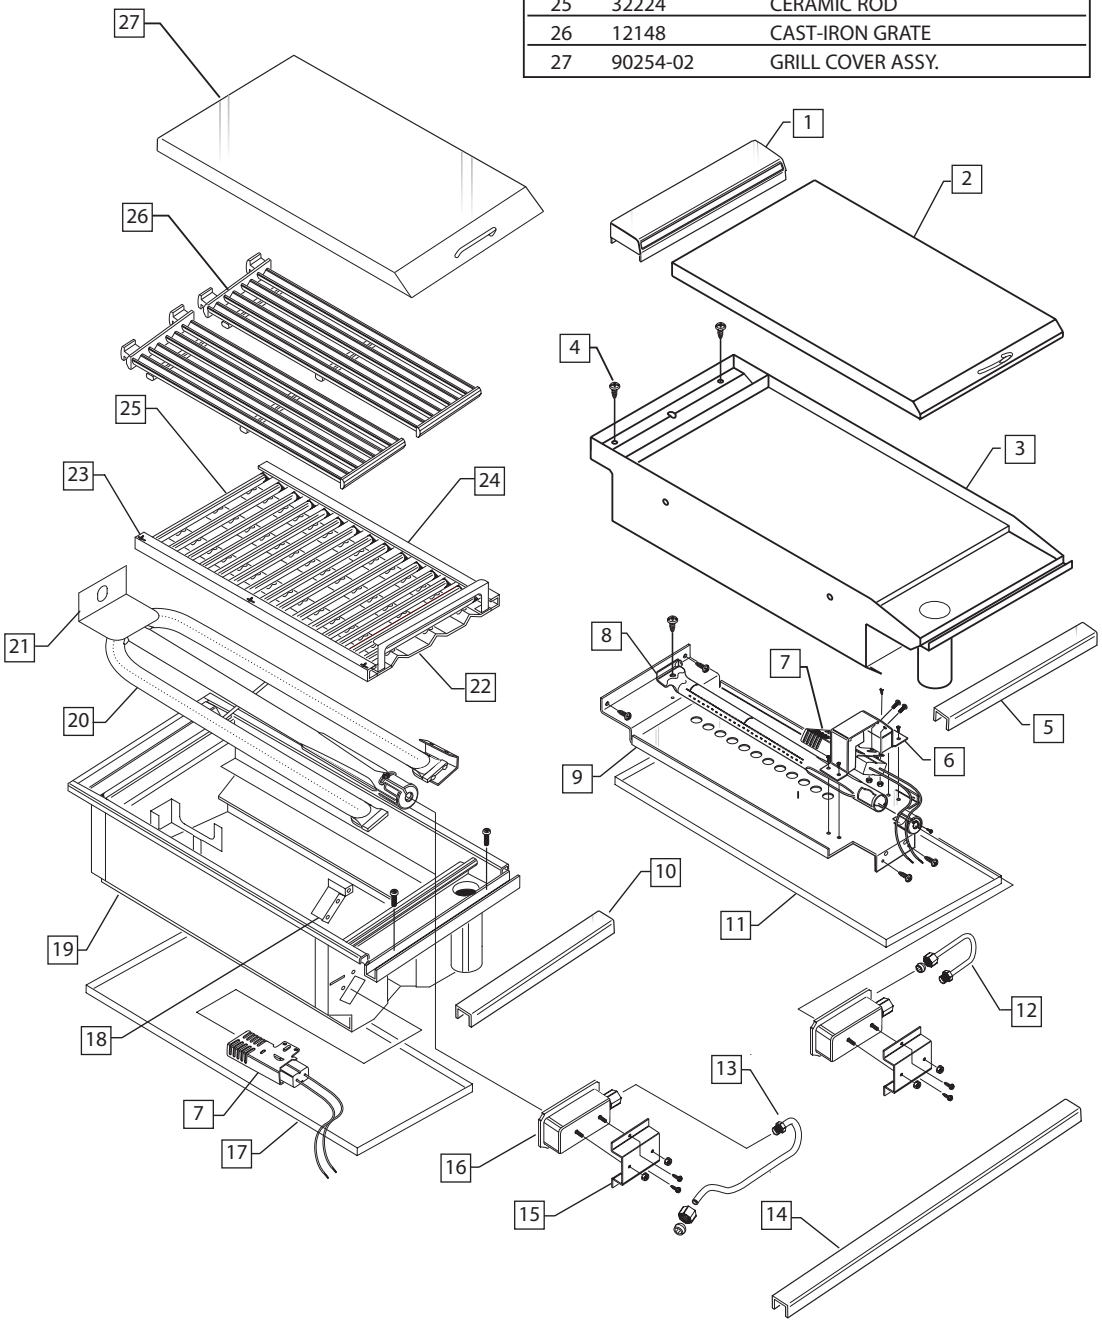

# CS-485 GRIDDLE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91981 | GRIDDLE,FLUE COVER |
| 2 | 91998 | GRIDDLE COVER ASSY. |
| 3 | 18204-02 | SIRO HANDLE (DCS) |
| 4 | 91975 | TRIM, GRIDDLE |
| 5 | 90142 | BRACKET, IGNITER GRID |
| 6 | 91955-04 | TUBING |
| 7 | 92014 | THERMAL VALVE BRACKET |
| 8 | 91955-03 | TUBING |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 9 | 13073 | SINGLE THERMAL VALVE (NAT) |
| | 13073-01 | SINGLE THERMAL VALVE (LP) |
| 10 | 92000 | DRIP GRIDDLE |
| 11 | 16009-1 | IGNITER- (SMALL) |
| 12 | 91776 | GRIDDLE BAFFLE |
| 13 | 12005-1 | BURNER, GRID. |
| 14 | 92010 | GRIDDLE ASSY |
| 15 | 15002-26 | SCREW, LEVELING |

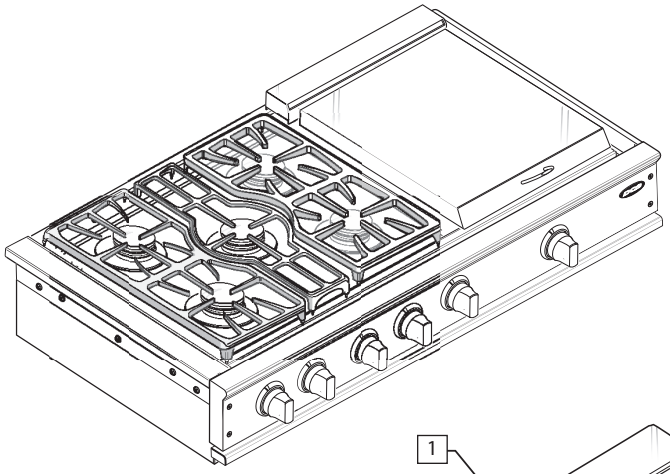

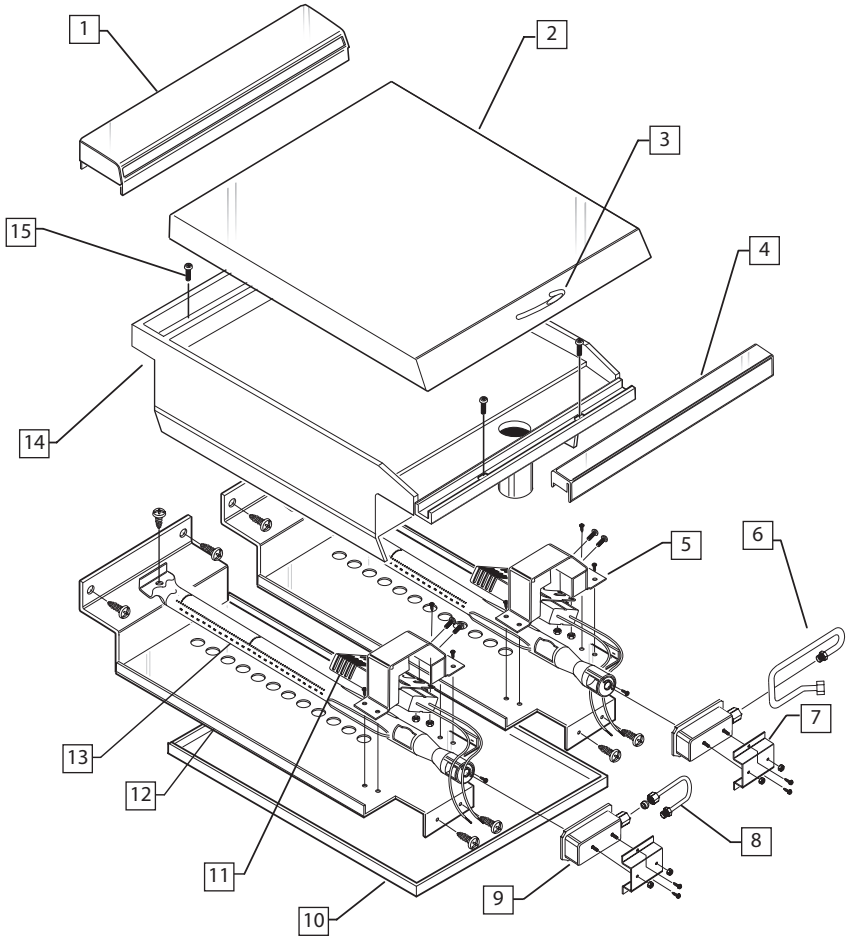

# CS-486GL MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16006 | TERMINAL BLOCK |
| 2 | 16427 | RE-IGNITION MODULE 6PT |
| 3 | 12177 | CLAMP VALVE |
| 4 | 15003-33 | BOLT, HEX HEAD |
| 5 | 91823-08 | MANIFOLD ASSY. (NAT) |
| | 91823-17 | MANIFOLD ASSY. (LP) |
| 6 | 13379-01 | GRILL VALVE (NAT) |
| | 13379-02 | GRILL VALVE (LP) |
| 7 | 18030-01 | ELBOW |
| 8 | 15225 | MANIFOLD ADAPTER |
| 9 | 15007 | PIPE PLUG |
| 10 | 15073 | CLIPS, LOGO |
| 11 | 16414 | BURNER SWITCH |
| 12 | 17382-01 | LOGO |
| 13 | 15002-41 | SCREW |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 14 | 14331 | KNOB, GRILL |
| 15 | 14353 | KNOB, BURNER |
| 16 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 17 | 91920-PA | VALVE PANEL |
| 18 | 12181 | C-CLIP, VALVE STEM |
| 19 | 13381-01 | VALVE, DUAL FLOW (NAT) |
| | 13381-02 | VALVE, DUAL FLOW (LP) |
| 20 | 18041 | FEMALE ELBOW |
| 21 | 18018-24 | PIPE INTAKE |
| 22 | 13003 | REGULATOR |
| 23 | 18018-15 | NIPPLE |
| 24 | 16464 | TRANSFORMER |
| 25 | 16507 | POWER CORD |

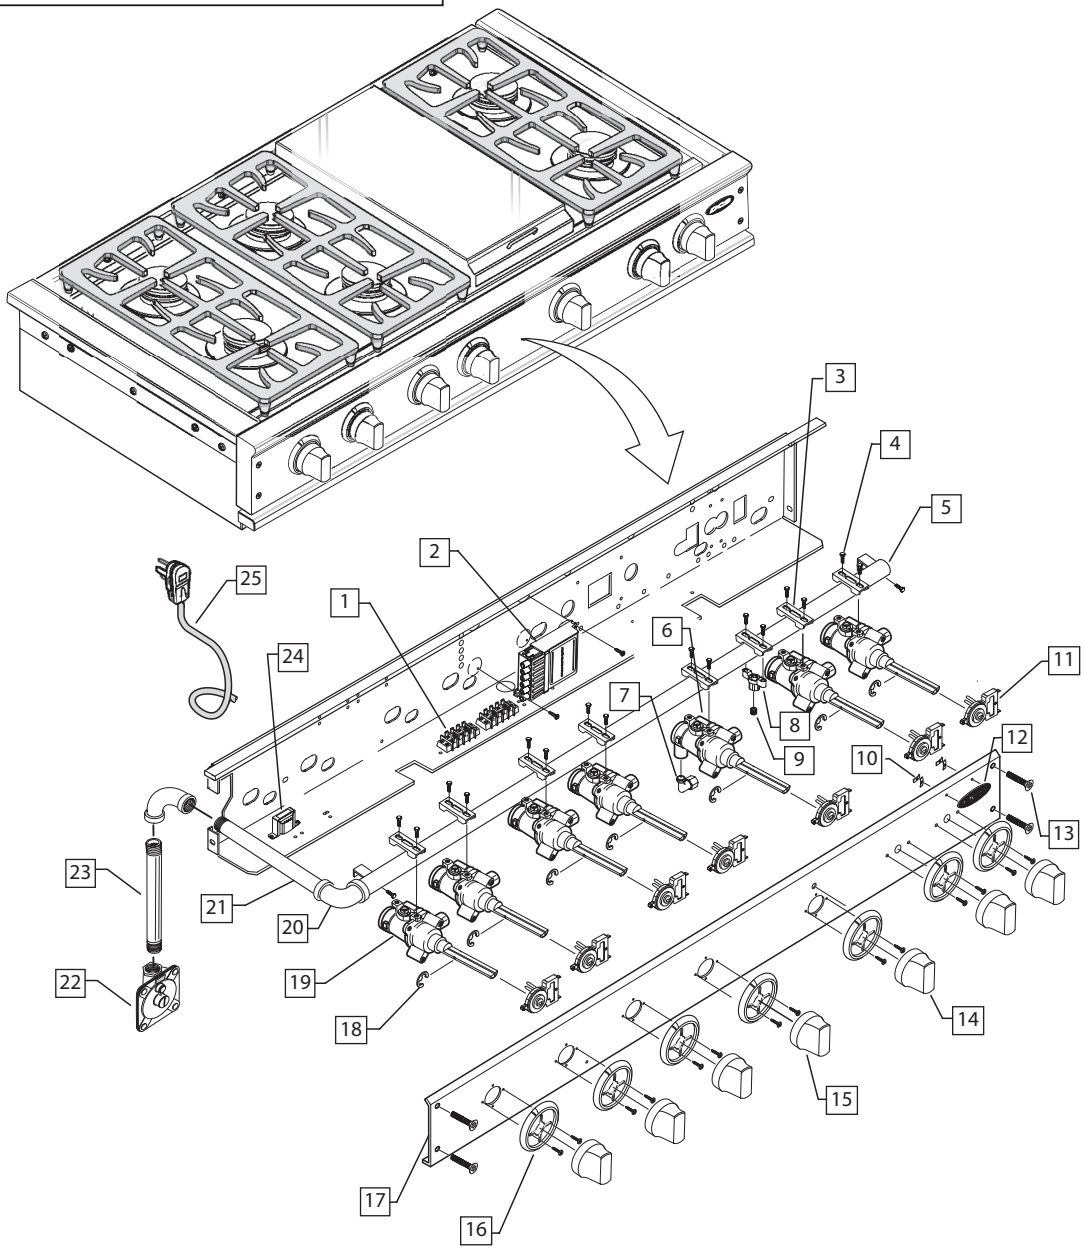

# CS-484GG MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16006 | TERMINAL BLOCK |
| 2 | 16426 | RE-IGNITION MODULE 4PT |
| 3 | 12177 | CLAMP VALVE |
| 4 | 15003-33 | BOLT, HEX HEAD |
| 5 | 91823-06 | MANIFOLD (NAT) |
| | 91823-15 | MANIFOLD (LP) |
| 6 | 18188-01 | ADAPTER |
| 7 | 18017 | ELBOW |
| 8 | 15225 | MANIFOLD ADAPTER |
| 9 | 15007 | PIPE PLUG |
| 10 | 13379-01 | GRILL VALVE (NAT) |
| | 13379-02 | GRILL VALVE (LP) |
| 11 | 18030-01 | ELBOW |
| 12 | 13310 | GRIDDLE THERMOSTAT |
| 13 | 17382-01 | LOGO |
| 14 | 15073 | LOGO, CLIP |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 15 | 15002-41 | SCREW |
| 16 | 14129 | KNOB, GRIDDLE |
| 17 | 14331 | KNOB, GRILL |
| 18 | 14353 | KNOB, BURNER |
| 19 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 20 | 91918-PA | VALVE PANEL |
| 21 | 16414 | BURNER SWITCH |
| 22 | 12181 | C-CLIP, VALVE STEM |
| 23 | 13381-01 | VALVE, DUAL FLOW (NAT) |
| | 13381-02 | VALVE, DUAL FLOW (LP) |
| 24 | 18041 | FEMALE ELBOW |
| 25 | 18018-24 | PIPE INTAKE |
| 26 | 13003 | REGULATOR |
| 27 | 18018-15 | NIPPLE |
| 28 | 16464 | TRANSFORMER |
| 29 | 16507 | POWER CORD |

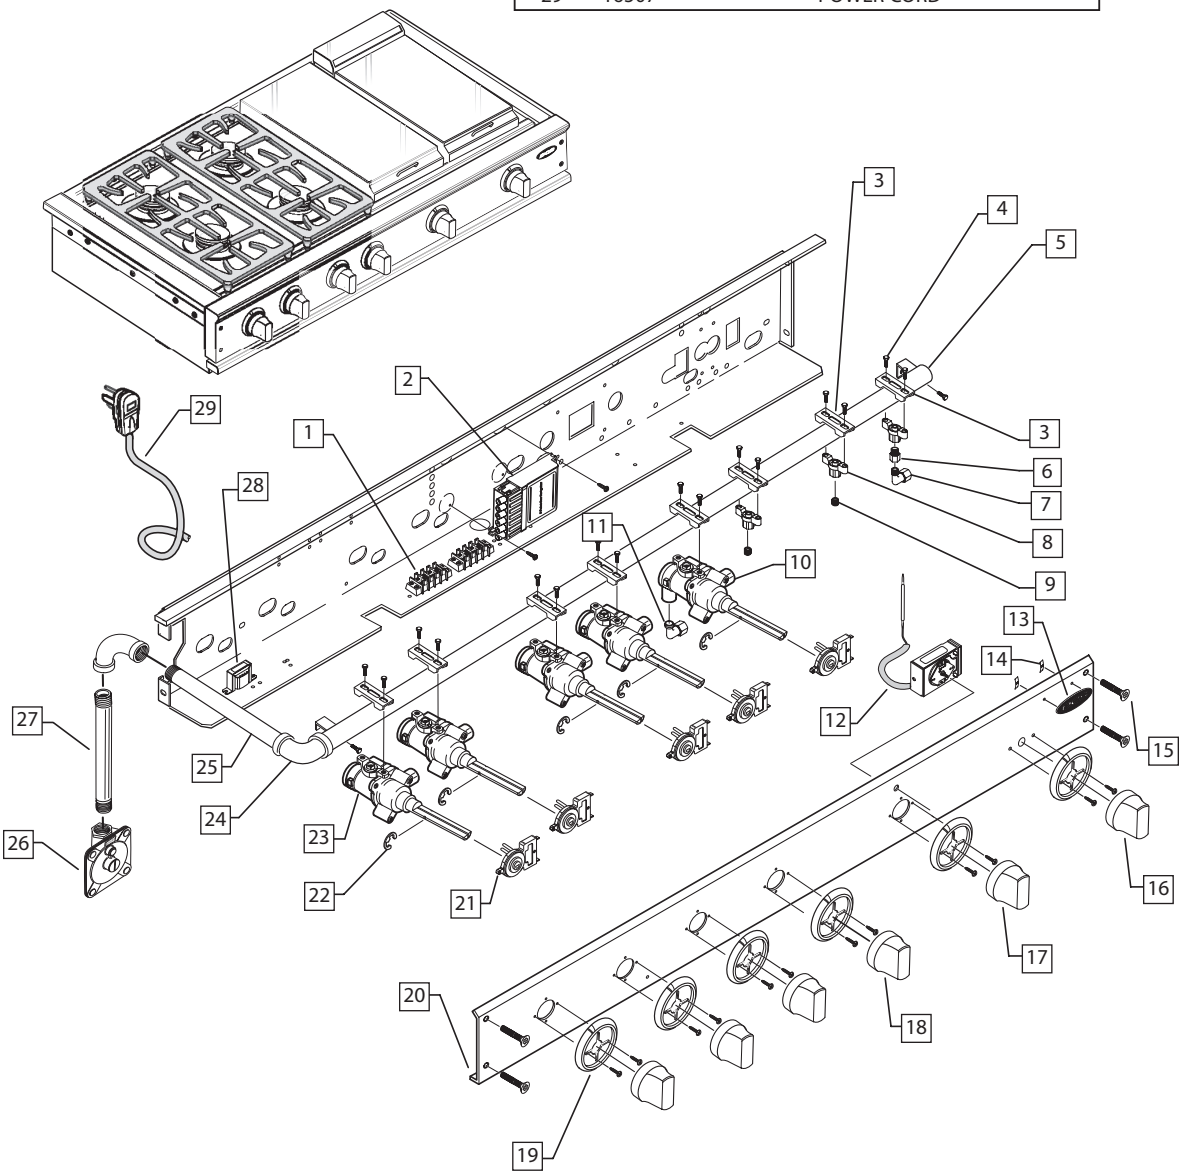

# CS-486GD MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16006 | TERMINAL BLOCK |
| 2 | 16427 | RE-IGNITION MODULE 6PT |
| 3 | 15003-33 | BOLT, HEX HEAD |
| 4 | 91823-07 | MANIFOLD (NAT) |
| | 91823-16 | MANIFOLD (LP) |
| 5 | 12177 | CLAMP VALVE |
| 6 | 15225 | MANIFOLD ADAPTER |
| 7 | 15007 | PIPE PLUG |
| 8 | 18017 | ELBOW |
| 9 | 18188-01 | ADAPTER |
| 10 | 13310 | THERMOSTAT |
| 11 | 16414 | BURNER SWITCH |
| 12 | 15073 | CLIP, LOGO |
| 13 | 17382-01 | LOGO |
| 14 | 15002-41 | SCREW |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 15 | 16046-02 | PILOT LIGHT & LEN |
| 16 | 14331 | KNOB, GRILL |
| 17 | 14353 | KNOB, BURNER |
| 18 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 19 | 91919-PA | VALVE PANEL |
| 20 | 12181 | C-CLIP, VALVE STEM |
| 21 | 13381-01 | VALVE, DUAL FLOW (NAT) |
| | 13381-02 | VALVE, DUAL FLOW (LP) |
| 22 | 18041 | FEMALE ELBOW |
| 23 | 18018-24 | PIPE INTAKE |
| 24 | 13003 | REGULATOR |
| 25 | 18018-15 | NIPPLE |
| 26 | 18041 | ELBOW 90° |
| 27 | 16464 | TRANSFORMER |
| 28 | 16507 | POWER CORD |

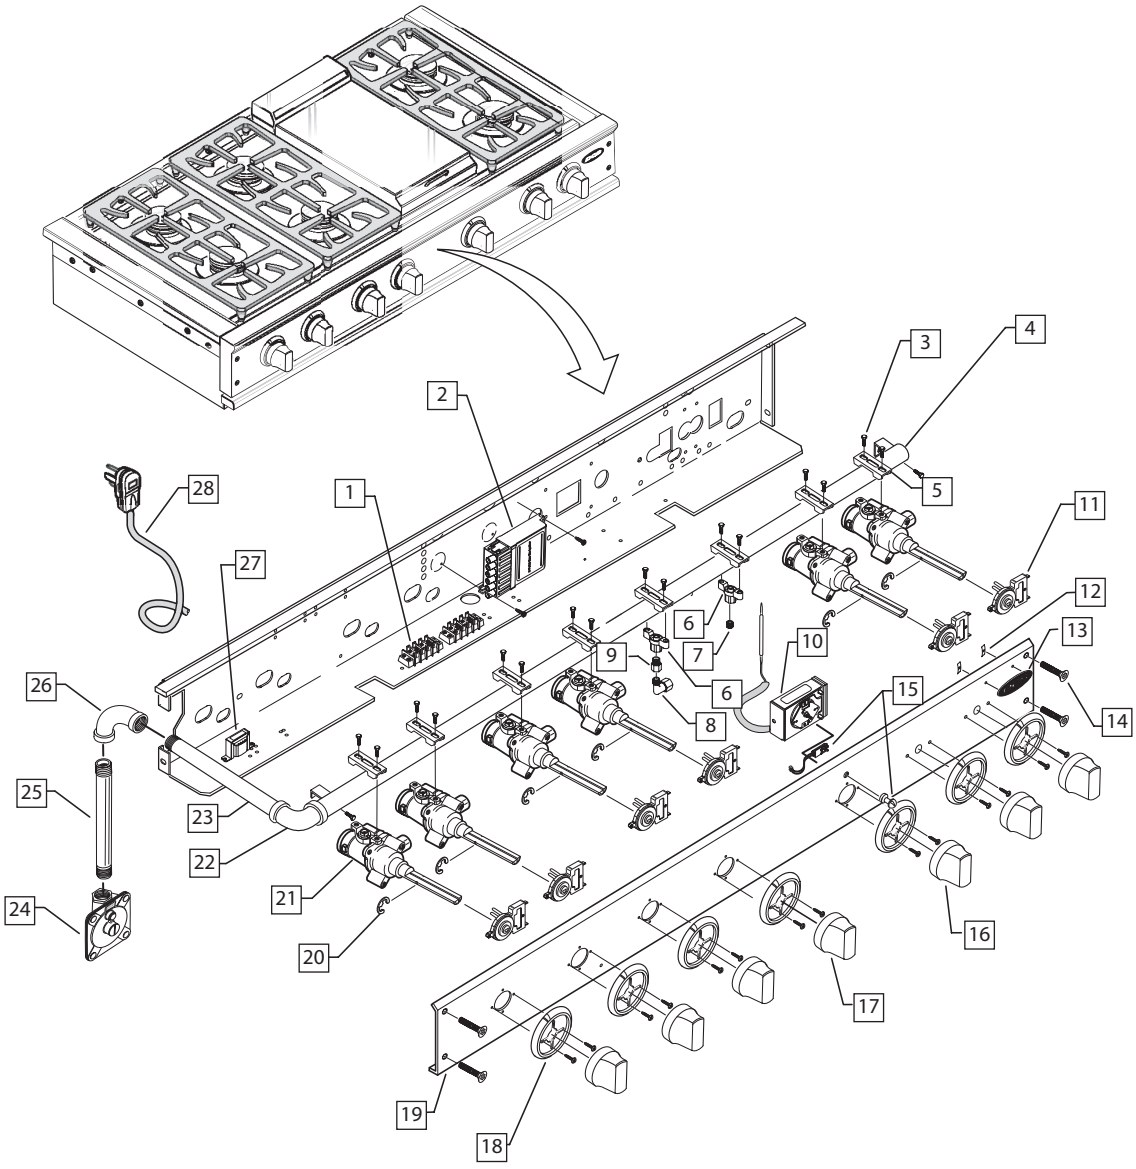

# CS-485 MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16006 | TERMINAL BLOCK |
| 2 | 16458 | RE-IGNITION MODULE |
| 3 | 15003-33 | BOLT, HEX HEAD |
| 4 | 92004-03 | MANIFOLD (NAT) |
| | 92004-06 | MANIFOLD (LP) |
| 5 | 12177 | CLAMP VALVE |
| 6 | 15007 | PIPE PLUG |
| 7 | 15225 | MANIFOLD ADAPTER |
| 8 | 18017 | ELBOW |
| 9 | 18188-01 | ADAPTER |
| 10 | 13393 | GRIDDLE THERMOSTAT |
| 11 | 15073 | CLIP LOGO |
| 12 | 17382-01 | LOGO |
| 13 | 15002-41 | SCREW |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 14 | 14356 | KNOB, GRIDDLE |
| 15 | 14353 | KNOB, BURNER |
| 16 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 17 | 92006-03-PA | VALVE PANEL |
| 18 | 16414 | BURNER SWITCH |
| 19 | 12181 | C-CLIP, VALVE STEM |
| 20 | 13381-01 | VALVE, DUAL FLOW (NAT) |
| | 13381-02 | VALVE, DUAL FLOW (LP) |
| 21 | 18041 | FEMALE ELBOW |
| 22 | 13003 | REGULATOR |
| 23 | 18018-15 | NIPPLE |
| 24 | 16464 | TRANSFORMER |
| 25 | 18018-24 | PIPE INTAKE |
| 26 | 16507 | POWER CORD |

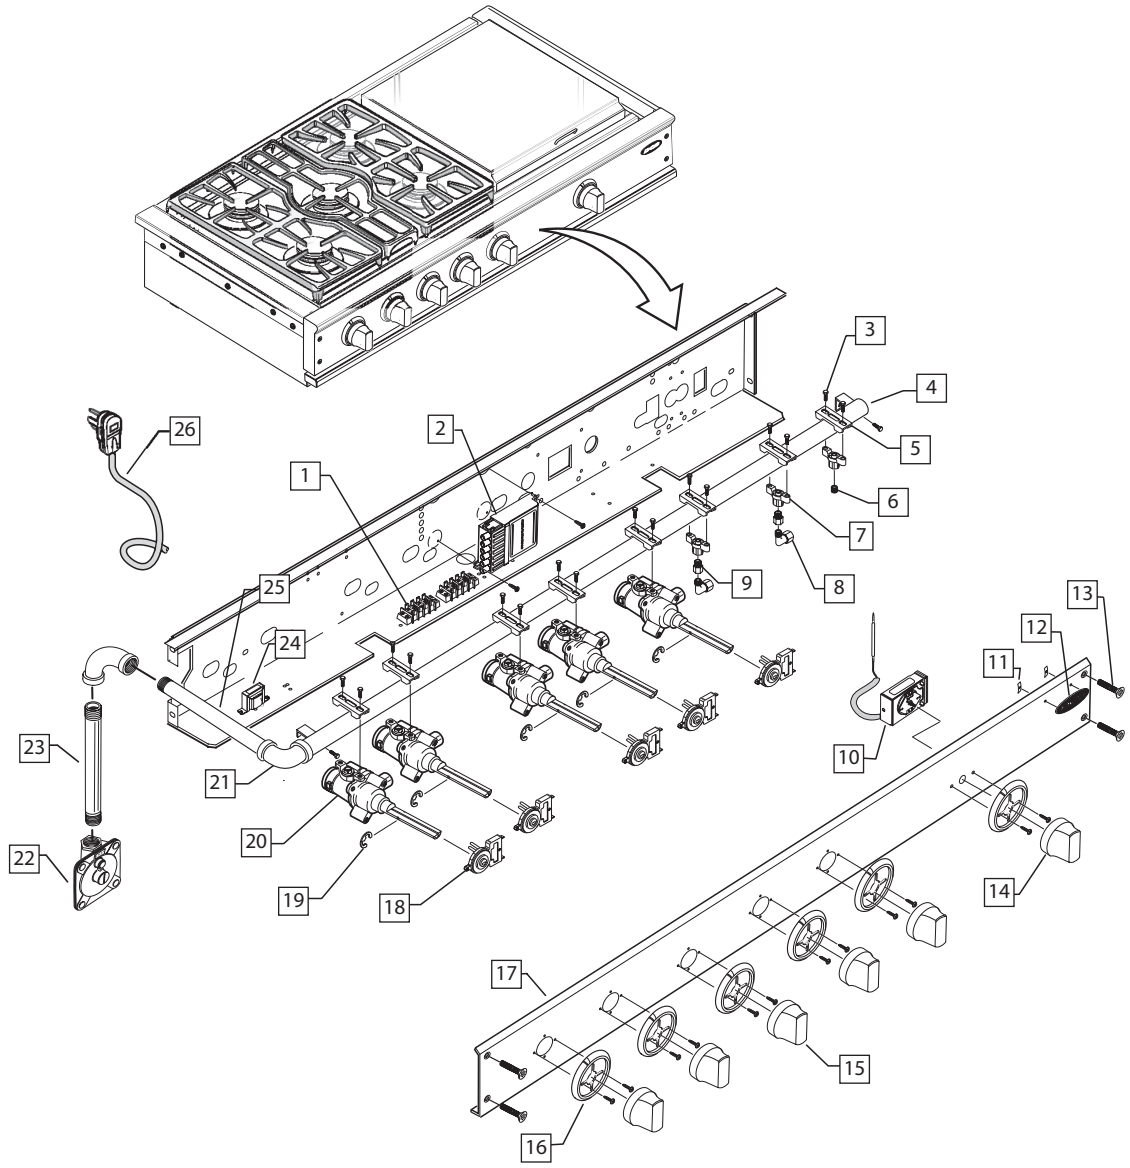

# CS-486GD STRUCTURE ASSEMBLY

| ITEM | PART NUMBER | DESCRIPTION |
|---|---|---|
| 1 | 91917 | BACK TRIM |
| 2 | 91924-01 | COOKTOP W/A |
| 3 | 15029-02 | NUT WITH RETAINER 8-32 |
| 4 | 90257 | SERVICE PANEL |
| 5 | 90068-02 | DRIP PAN R/H |
| 6 | 90635 | DRIP PAN HANDLE W/A |
| | 90635-PL-B | DRIP PAN HANDLE W/A R/H BRASS |

| ITEM | PART NUMBER | DESCRIPTION |
|---|---|---|
| 7 | 96646 | HANDLE L/H |
| | 96646-PL-B | HANDLE L/H BRASS8 |
| 8 | 91671 | BRACKET, DRIP PAN HANDLE LEFT |
| 9 | 92012 | BRACKET PIPE HOLDER |
| 10 | 90478 | GUIDE CENTER DRIP PAN |
| 10a | 90237 | GUIDE DRIP PAN |
| 11 | 14132 | ROLLER (4 PLCS) |

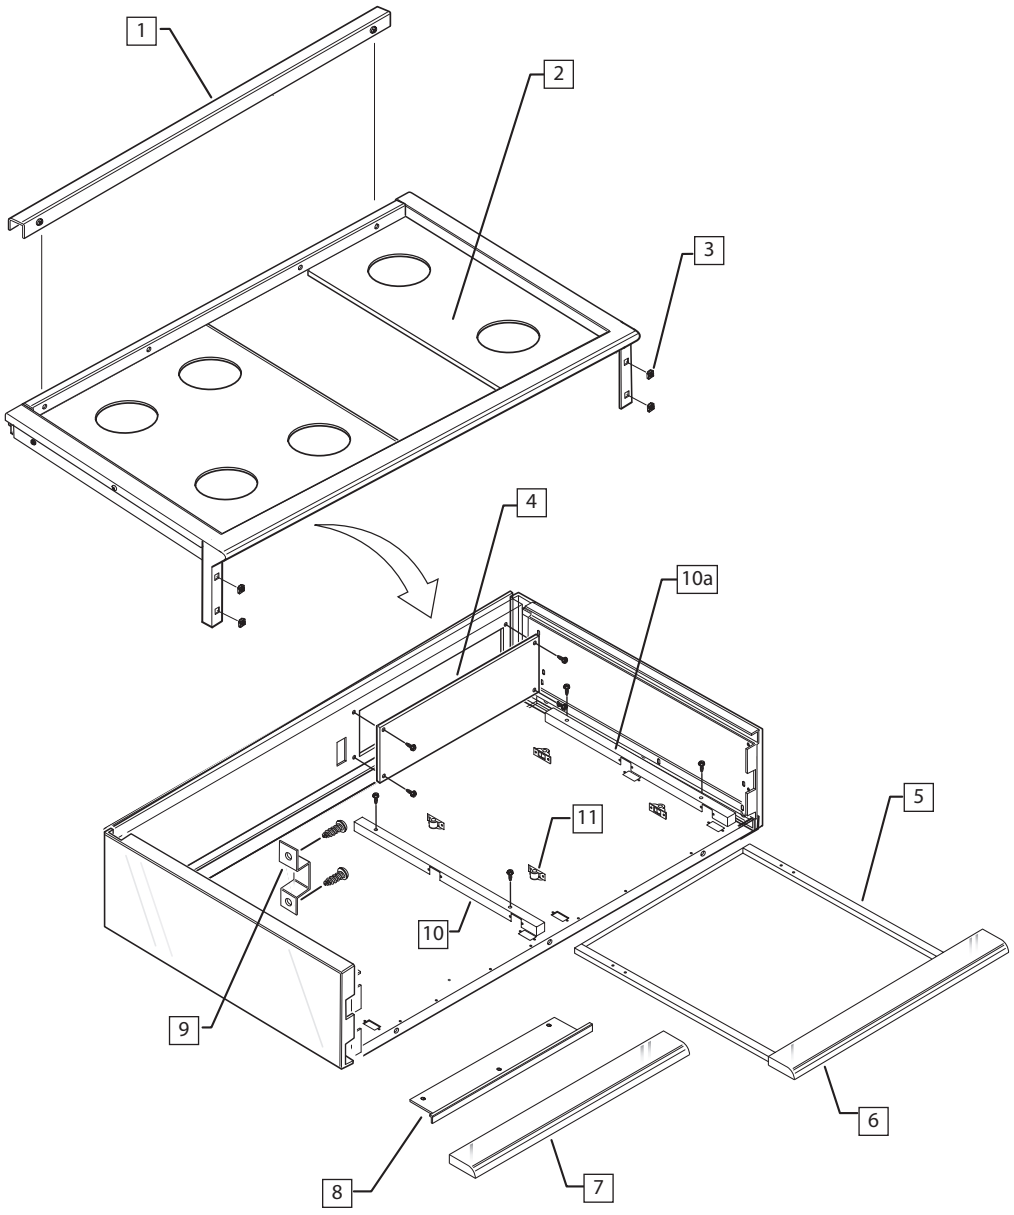

# CS-486GL STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91917 | BACK TRIM |
| 2 | 91924 | COOKTOP W/A |
| 3 | 15029-02 | NUT WITH RETAINER 8-32 |
| 4 | 90257 | SERVICE PANEL |
| 5 | 90068-02 | DRIP PAN R/H |
| 6 | 96635 | DRIP PAN HANDLE W/A |
| | 96635-PL-B | DRIP PAN HANDLE W/A R/H BRASS |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 7 | 96646 | HANDLE L/H |
| | 96646-PL-B | HANDLE L/H BRASS |
| 8 | 91671 | BRACKET, DRIP PAN HANDLE LEFT |
| 9 | 92012 | BRACKET PIPE HOLDER |
| 10 | 90478 | GUIDE CENTER DRIP PAN |
| 10a | 90237 | GUIDE DRIP PAN |
| 11 | 14132 | ROLLER (4 PLCS) |

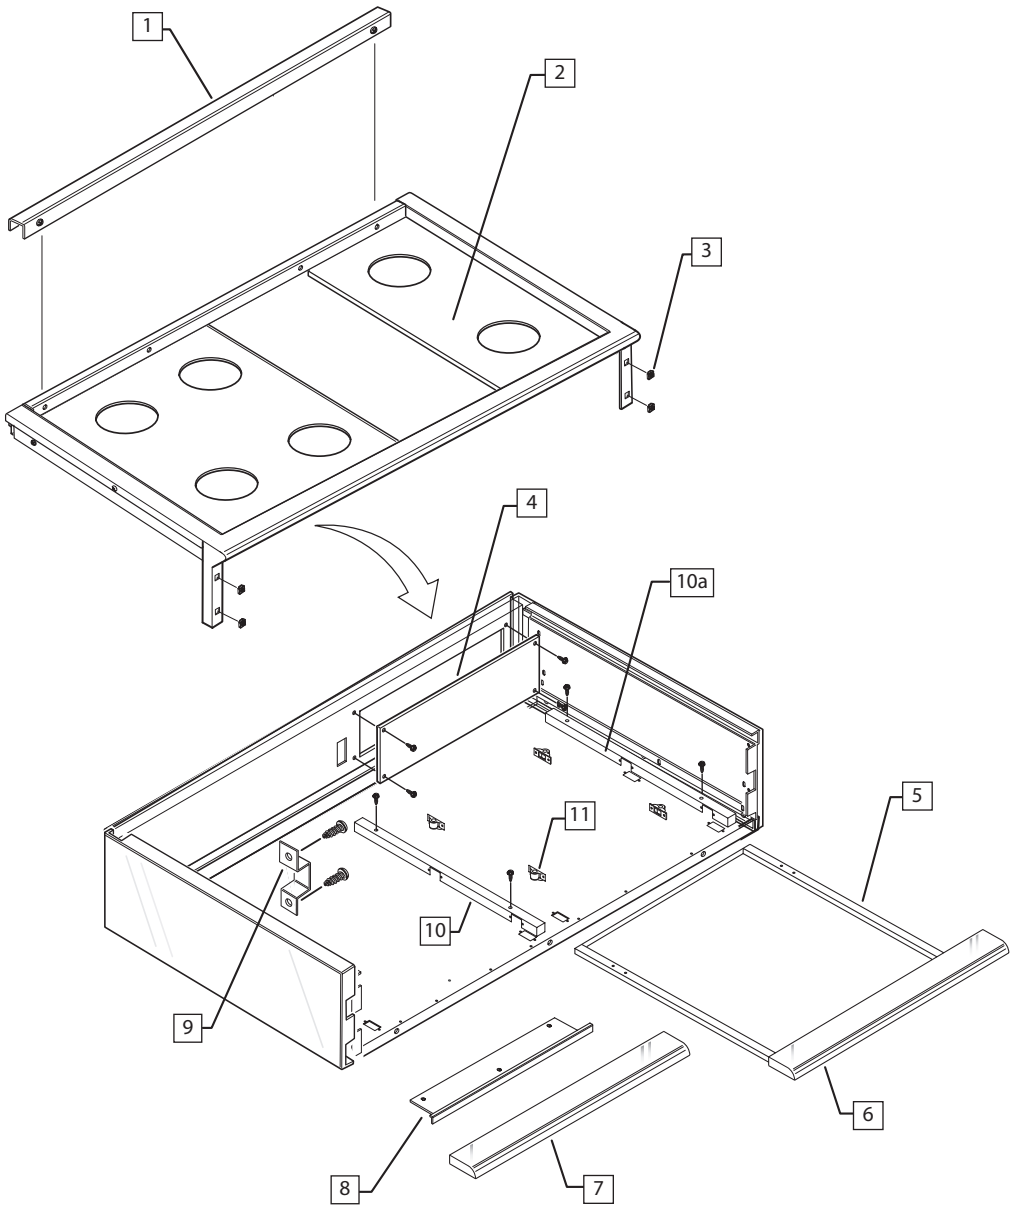

# CS-485GD STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91917 | BACK TRIM |
| 2 | 91924 | COOKTOP W/A |
| 3 | 15029-02 | NUT WITH RETAINER 8-32 |
| 4 | 90257 | SERVICE PANEL |
| 5 | 90068-02 | DRIP PAN R/H |
| 6 | 96635 | DRIP PAN HANDLE W/A |
| | 96635-PL-B | DRIP PAN HANDLE W/A R/H BRASS |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 7 | 96646 | HANDLE L/H |
| | 96646-PL-B | HANDLE L/H BRASS |
| 8 | 91671 | BRACKET, DRIP PAN HANDLE LEFT |
| 9 | 92012 | BRACKET PIPE HOLDER |
| 10 | 90478 | GUIDE CENTER DRIP PAN |
| 10a | 90237 | GUIDE DRIP PAN |
| 11 | 14132 | ROLLER (4 PLCS) |

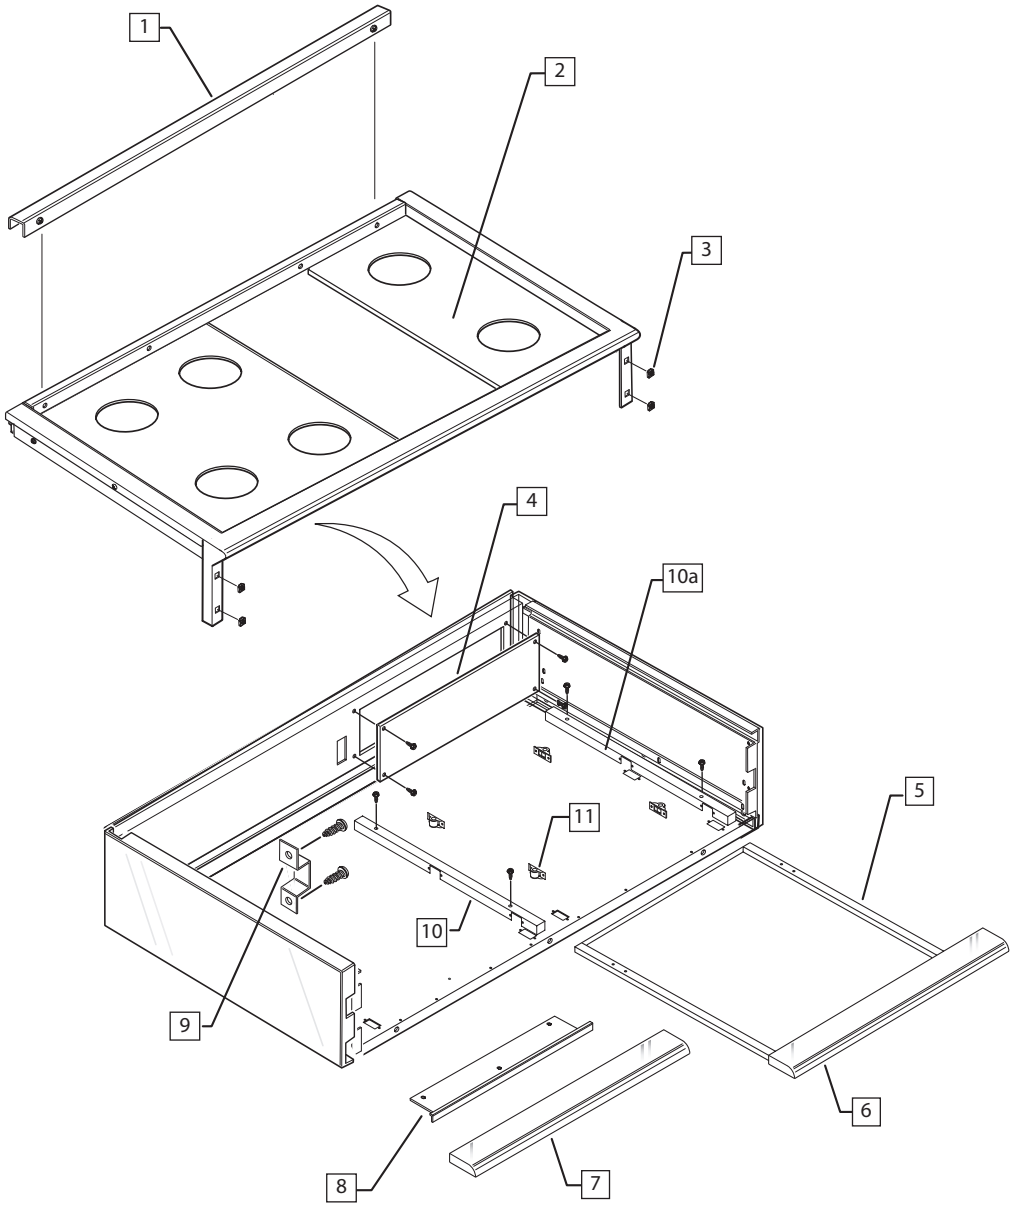

# CS-484 GG STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91917 | BACK TRIM |
| 2 | 91924 | COOKTOP W/A |
| 3 | 15029-02 | NUT WITH RETAINER 8-32 |
| 4 | 90257 | SERVICE PANEL |
| 5 | 90068-02 | DRIP PAN R/H |
| 6 | 96645 | DRIP PAN HANDLE W/A |
| | 96645-PL-B | DRIP PAN HANDLE W/A R/H BRASS |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 7 | 96646 | HANDLE L/H |
| | 96646-PL-B | HANDLE L/H BRASS |
| 8 | 91671 | BRACKET, DRIP PAN HANDLE LEFT |
| 9 | 92012 | BRACKET PIPE HOLDER |
| 10 | 90478 | GUIDE CENTER DRIP PAN |
| 10a | 90237 | GUIDE DRIP PAN |
| 11 | 14132 | ROLLER (4 PLCS) |

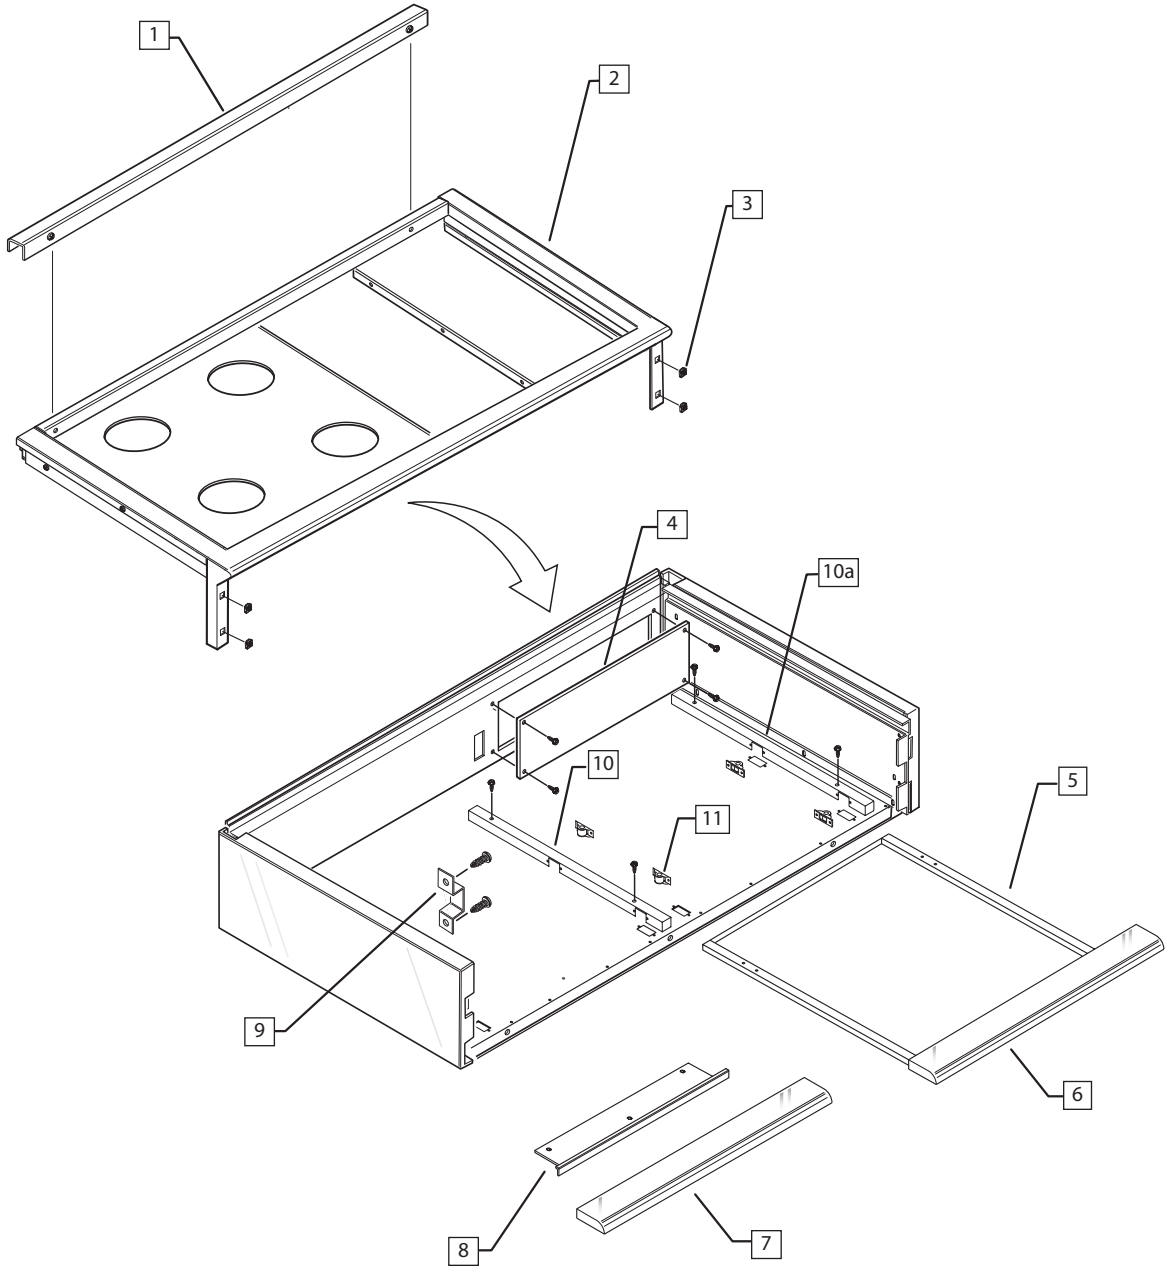

# CS-36 BURNER ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 12266-01 | GRATE SIDE |
| 1a | 12278-01 | GRATE CENTER |
| 2 | K-14355 | FEET KIT |
| 3 | 12272 | D BURNER CAP |
| 4 | 12274 | D PORT RING |
| 5 | 15219 | VENTURI NUT |
| 6 | 12270 | D SIMMER RING |
| 7 | 13378 | VENTURI |
| 8 | 12304 | D BURNER BASE ASSY. |
| 9 | 91545-PC | VOLCANO |
| 10 | 91925-02 | TUBING,FRONT SIMMER |
| 11 | 91925-01 | TUBING, MAIN FRONT |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 12 | 91925-04 | TUBING, SIMMER REAR |
| 13 | 91925-03 | TUBING, MAIN REAR |
| 14 | 12254-02 | LOW JET HOLDER LP |
| ` | 12254-01 | LOW JET HOLDER NAT |
| 15 | 12200-13 | JET HOLDER (NAT) |
|  | 12200-04 | JET HOLDER |
| `16 | 15185 | SIMMER JET HOLDER NUT |
| 17 | 12150 | JET HOLDER NUT |
| 18 | 91761 | BURNER HANGER |
| 19 | 91727 | COOKTOP SUPPORT |
| 20 | 15001-19 | SCREW, SUPPORT |
| 21 | K-12283 | ELECTRODE |

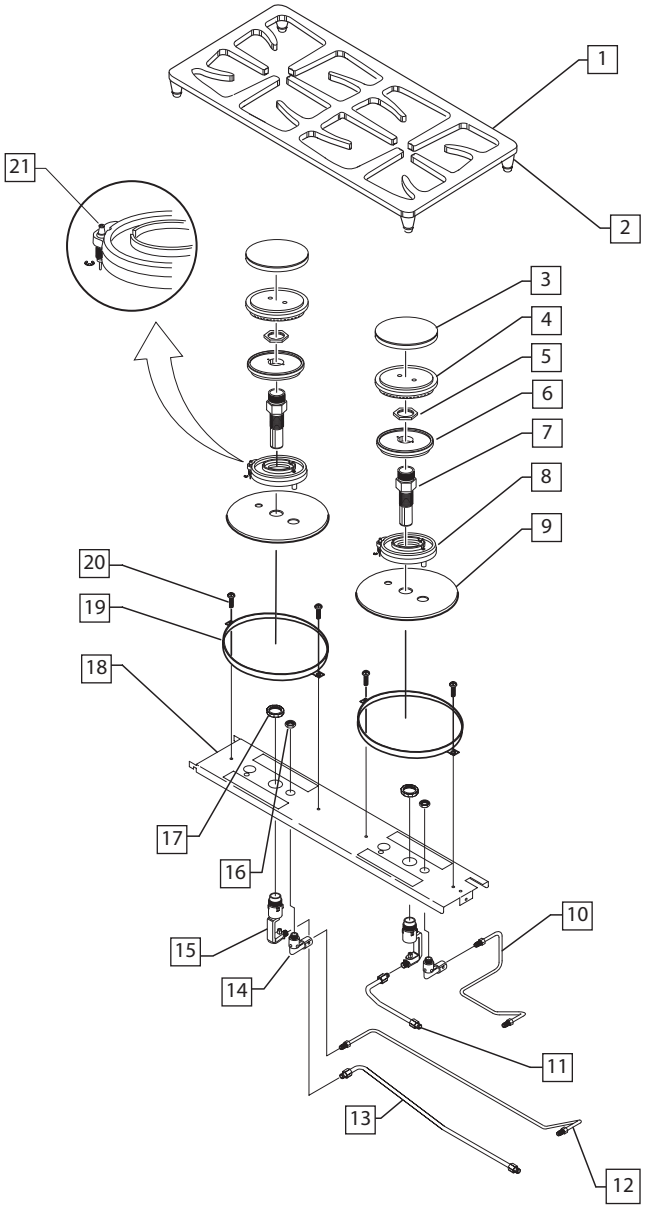

# CS-36 GRILL AND GRIDDLE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91899 | GRIDDLE FLUE COVER |
| 2 | 90253-02 | GRILL COVER |
| 3 | 90133-01 | GRIDDLE ASSY |
| 4 | 15002-32 | SCREW, LEVELING |
| 5 | 90192-02 | GRIDDLE TRIM |
| 6 | 90142 | BRACKET, IGNITER GRIDDLE |
| 7 | 16009-1 | IGNITER- (SMALL) |
| 8 | 12005-1 | GRIDDLE BURNER |
| 9 | 90141 | GRIDDLE BAFFLE |
| 10 | 90192-03 | TRIM, GRILL |
| 11 | 92000 | DRIP PAN, GRIDDLE |
| 12 | 91955-01 | TUBING, GRIDDLE |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 13 | 91955-02 | TUBING, GRILL |
| 14 | 92025 | THERMAL VALVE BRACKET |
| 15 | 13073 | SINGLE THERMAL VALVE (NAT) |
|  | 13073-01 | SINGLE THERMAL VALVE (LP) |
| 16 | 30313-3 | DRIP PAN |
| 17 | 90251 | GRILL IGNITER BRACKET |
| 18 | 90630 | GRILL BOX ASSY. |
| 19 | 12289 | BURNER, GRILL |
| 20 | 90075 | BURNER BRACKET |
| 21 | 96657 | RADIANT TRAY |
| 22 | 91447 | END CAP, TRAY |
| 23 | 91483 | RADIANT ASSY. |
| 24 | 32224 | CERAMIC ROD 9.50 (16) |
| 25 | 12148 | CAST-IRON GRATE |
| 26 | 90254-02 | GRILL COVER ASSY. |

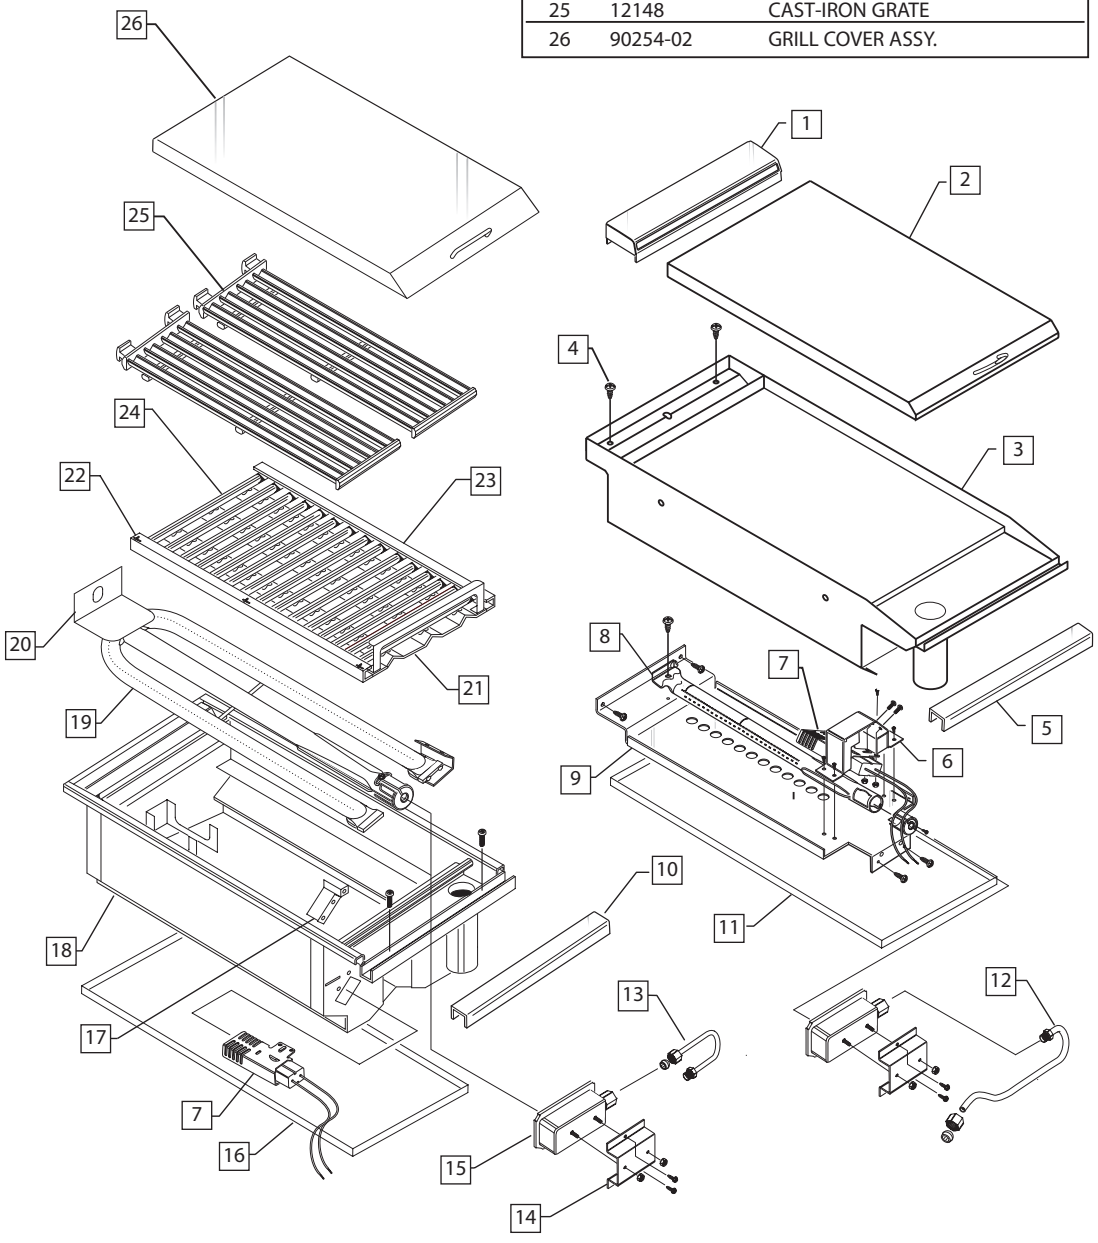

# CS-366 MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16464 | TRANSFORMER |
| 2 | 16006 | TERMINAL BLOCK |
| 3 | 16427 | RE-IGNITION MODULE 6PT |
| 4 | 15003-33 | HEX HD BOLT |
| 5 | 12177 | VALVE CLAMP |
| 6 | 12181 | C-CLIP, VALVE STEM |
| 7 | 91815-06 | MANIFOLD ASSY. –366 (NAT) |
| | 91815-15 | MANIFOLD ASSY. –366 (LP) |
| 8 | 13381-01 | VALVE, DUAL FLOW 6 OC (NAT) |
| | 13381-02 | VALVE, DUAL FLOW 6 OC (LP) |
| 9 | 16414 | IGNITER SWITCH |
| 10 | 15073 | CLIP, LOGO |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 11 | 17382-01 | LOGO |
| 12 | 14353 | BURNER KNOB |
| 13 | 14006-PL | BEZEL, CROME PL |
| | 14006-PL-B | BEZEL, BRASS PL |
| 14 | 15002-41 | SCREW, TORX FL FD |
| 15 | 91911-PA | VALVE PANEL 366 |
| 16 | 18041 | ELBOW 1/2 –1/2 FEMALE |
| 17 | 18018-24 | INTAKE PIPE |
| 18 | 13003 | REGULATOR LP/NAT |
| 19 | 18018-15 | NIPPLE |
| 20 | 16507 | POWER CORD |

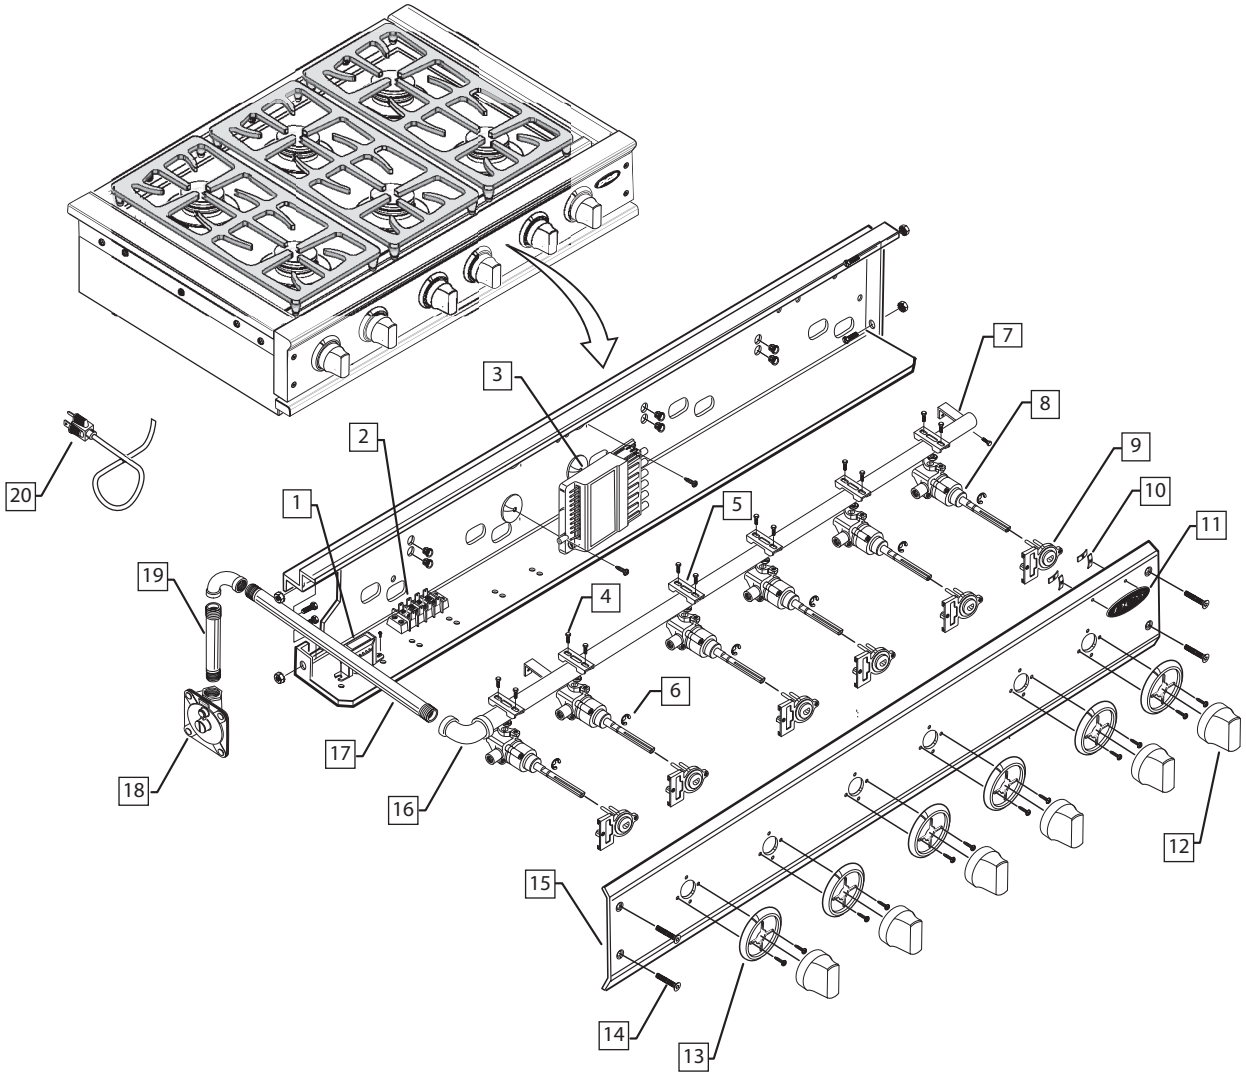

# CS-364GL MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 12177 | VALVE CLAMP |
| 2 | 91815-08 | MANIFOLD ASSEMBLY |
| | 91815-17 | MANIFOLD ASSEMBLY |
| 3 | 15003-33 | HEX HD BOLT |
| 4 | 12181 | C-CLIP |
| 5 | 13379-01 | VALVE, GRIDDLE (NAT) |
| | 13379-02 | VALVE, GRIDDLE (LP) |
| 6 | 91913-PA | VALVE PANEL |
| 7 | 13381-01 | DUAL FLOW VALVE (NAT) |
| | 13381-02 | DUAL FLOW VALVE (LP) |
| 8 | 16414 | IGNITER SWITCH |
| 9 | 15073 | CLIP, LOGO |
| 10 | 17382-01 | LOGO |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 11 | 15002-41 | SCREW, TORX FL FD |
| 12 | 14353 | KNOB, BURNER |
| 13 | 14331 | OVEN KNOB, GRIDDLE |
| 14 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 15 | 18041 | FEMALE ELBOW |
| 16 | 18018-24 | PIPE INTAKE |
| 17 | 13003 | REGULATOR |
| 18 | 18018-15 | NIPPLE |
| 19 | 16464 | TRANSFORMER |
| 20 | 16006 | TERMINAL BLOCK |
| 21 | 16426 | RE-IGNITION MODULE 4PT |
| 22 | 16507 | POWER CORD |

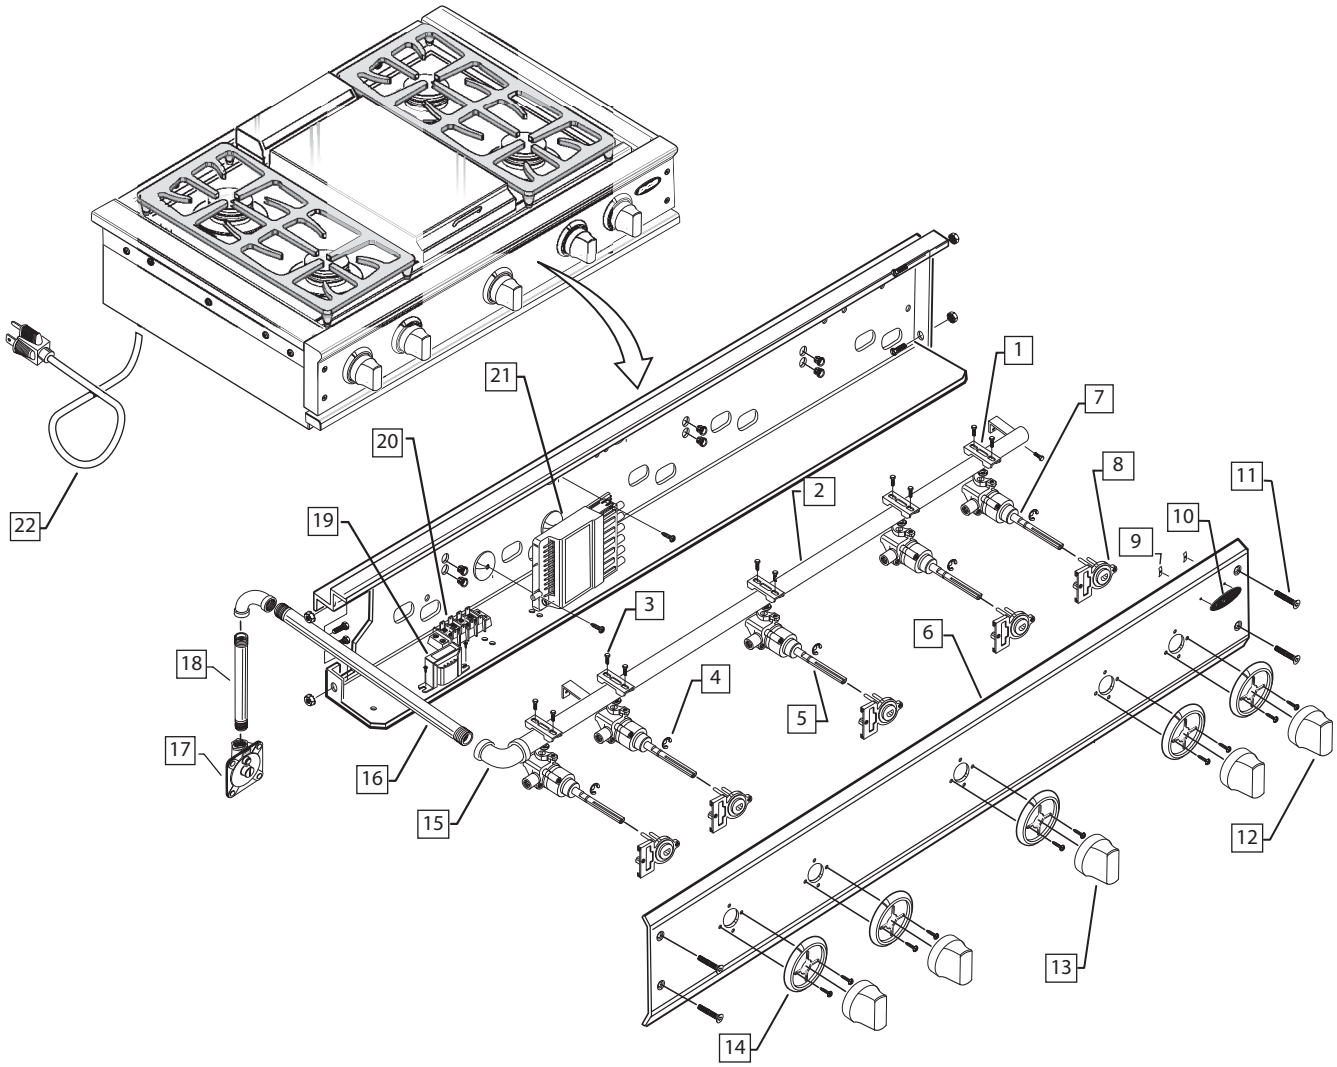

# CS-364GD MANIFOLD ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 16426 | RE-IGNITION MODULE 4PT |
| 2 | 16006 | TERMINAL BLOCK |
| 3 | 16464 | TRANSFORMER, 240V |
| 4 | 91815-07 | MANIFOLD (NAT) |
| | 91815-16 | MANIFOLD (LP) |
| 5 | 12177 | CLAMP VALVE |
| 6 | 15003-33 | HEX HD BOLT |
| 7 | 12181 | C-CLIP, VALVE STEM |
| 8 | 15225 | MANIFOLD ADAPTER |
| 9 | 18017 | ELBOW 3/8 T.O.D.–1/8 NPT(M) |
| 10 | 16046-02 | PILOT LIGHT |
| 11 | 13310 | THERMOSTAT, GRIDDLE |
| 12 | 13381-01 | VALVE, DUAL FLOW (NAT) |
| | 13381-02 | VALVE, DUAL FLOW (LP) |

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 13 | 16414 | IGNITER SWITCH |
| 14 | 15073 | CLIP |
| 15 | 17382-01 | LOGO |
| 16 | 14353 | KNOB, BURNER |
| 17 | 14006-PL | BEZEL |
| | 14006-PL-B | BEZEL BRASS |
| 18 | 15002-41 | SCREW |
| 19 | 91912-PA | VALVE PANEL |
| 20 | 18041 | ELBOW, FEMALE |
| 21 | 18018-24 | PIPE INTAKE |
| 22 | 13003 | REGULATOR |
| 23 | 18018-15 | NIPPLE |
| 24 | 16507 | POWER CORD |

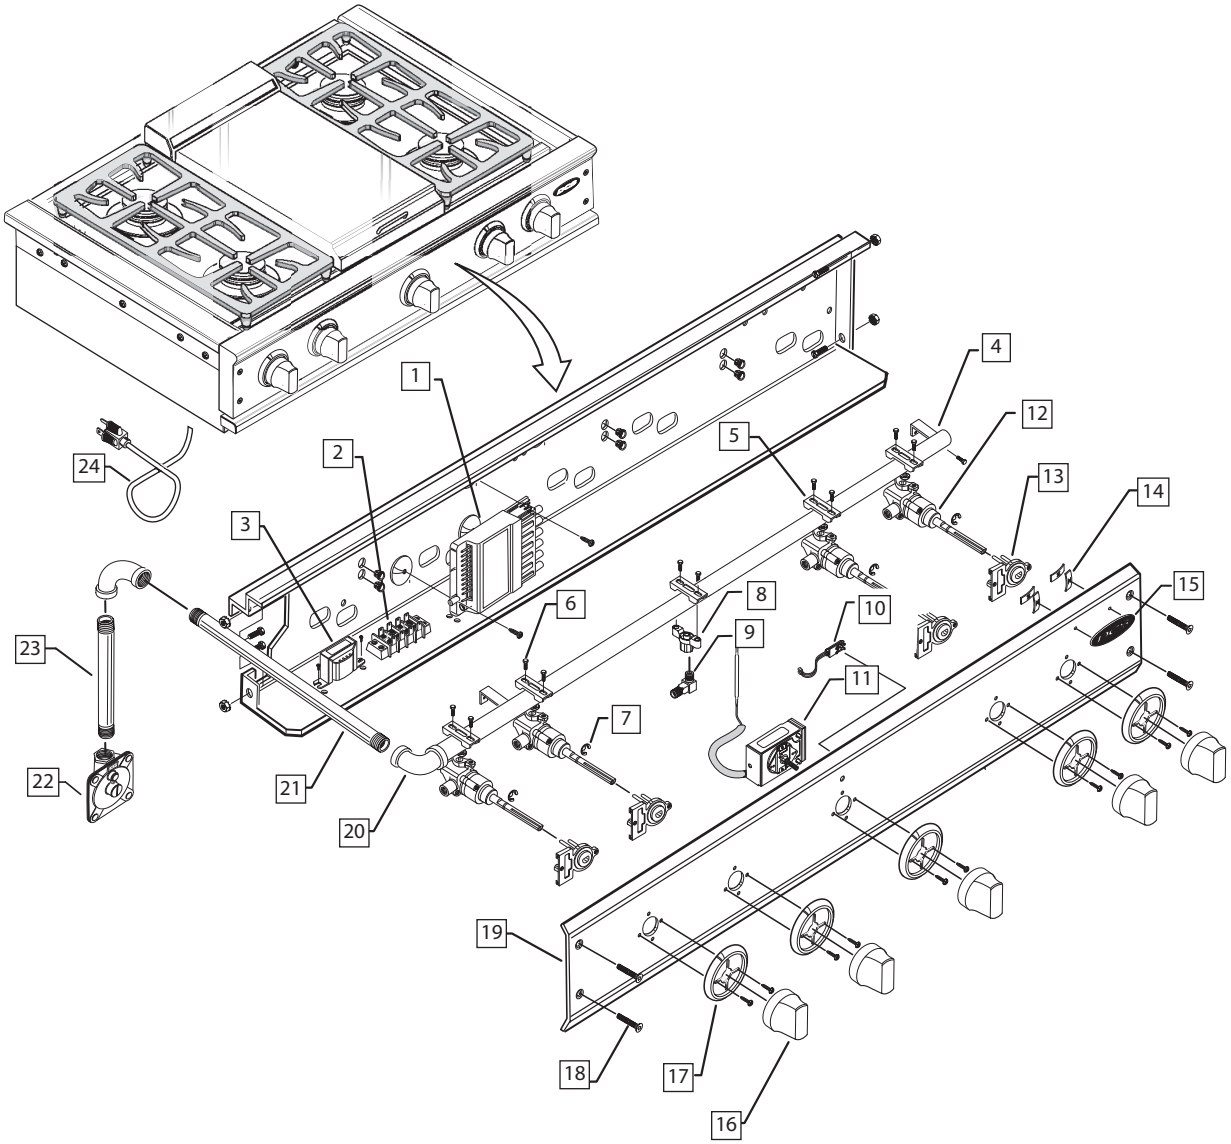

# CS-366 STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91914 | BACK TRIM |
| 2 | 91923 | COOK TOP W/A |
| 3 | 15029-02 | CAGED NUT |
| 4 | 90257 | SERVICE PANEL |
| 5 | 91803 | BRACKET, DRIP PAN |
| 6 | 96641 | DRIP PAN HANDLE |
| | 96641-01-PL-B | DRIP PAN HANDLE |
| 7 | 92012 | BRACKET PIPE HOLDER |

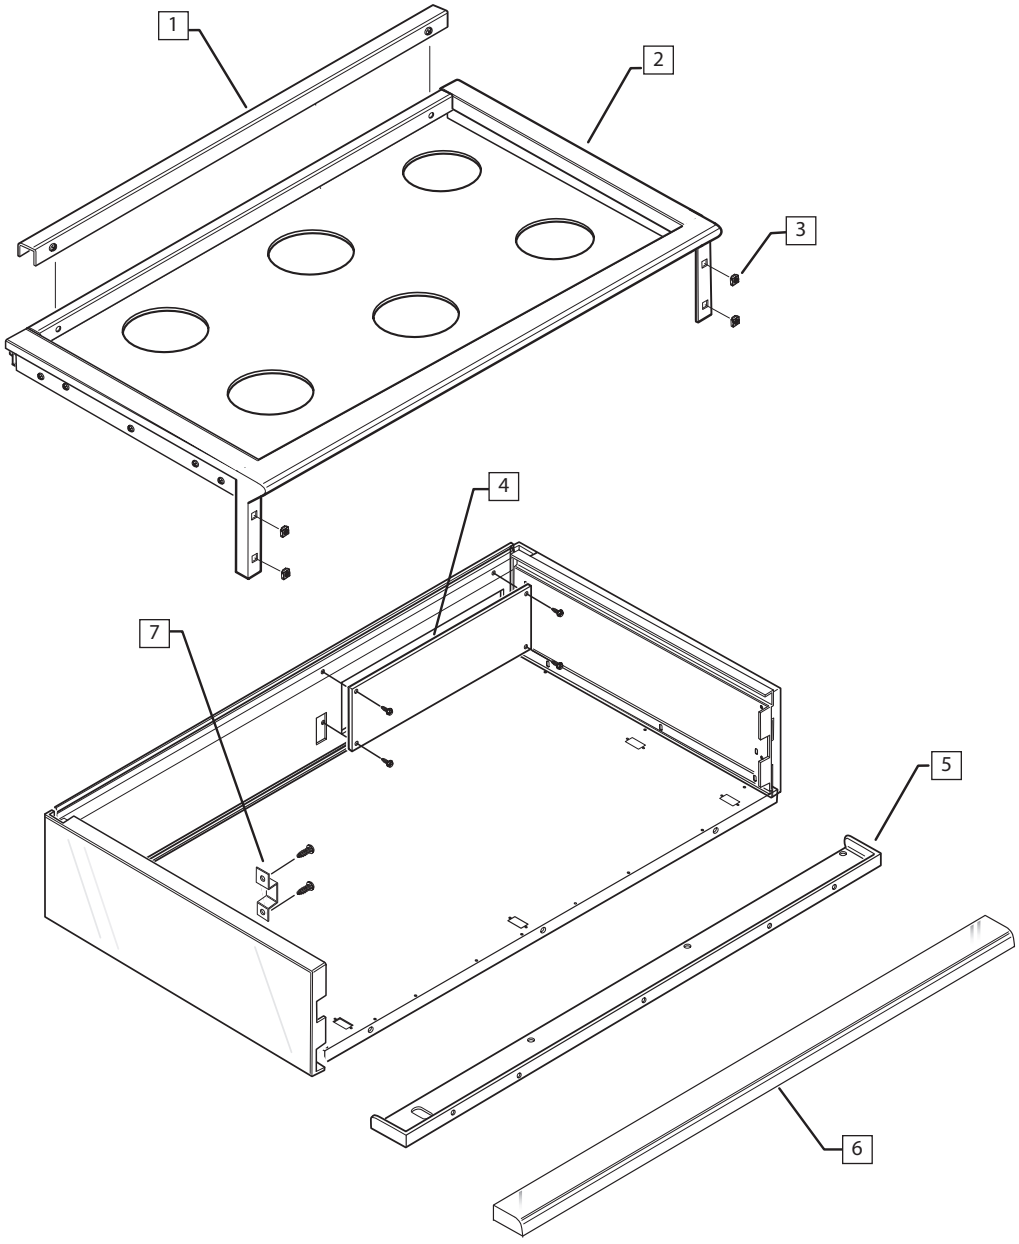

# CS-364 GD STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91914 | BACK TRIM |
| 2 | 91921-01 | COOK TOP W/A |
| 3 | 15029-02 | CAGED NUT |
| 4 | 90257 | SERVICE PANEL |
| 5 | 14132 | ROLLER (4 PLCS) |
| 6 | 90237 | DRIP PAN GUIDE |
| 7 | 90212 | DRIP PAN BROILER & GRIDDLE |
| 8 | 90715 | DRIP PAN HANDLE |
|  | 90716-01-PL-B | DRIP PAN HANDLE BRASS |
| 9 | 92012 | BRACKET PIPE HOLDER |

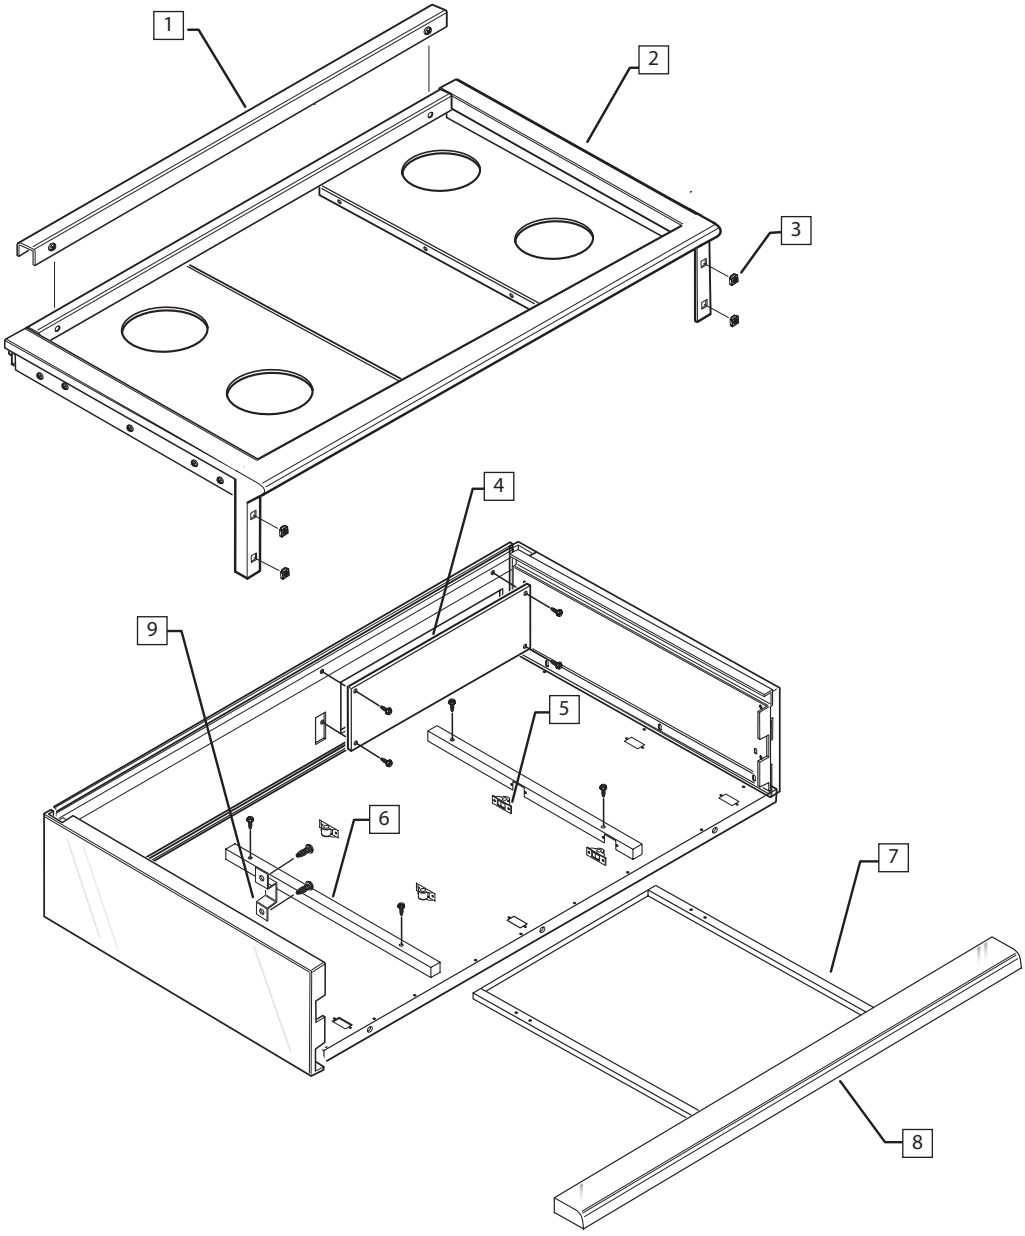

# CS-364 GL STRUCTURE ASSEMBLY

| ITEM | PART NO. | DESCRIPTION |
|---|---|---|
| 1 | 91914 | BACK TRIM |
| 2 | 91921 | COOK TOP W/A |
| 3 | 15029-02 | CAGED NUT |
| 4 | 90257 | SERVICE PANEL |
| 5 | 14132 | ROLLER (6 PLCS) |
| 6 | 90237 | DRIP PAN GUIDE |
| 7 | 90212 | DRIP PAN BROILER & GRIDDLE |
| 8 | 90716 | DRIP PAN HANDLE |
|  | 90716-01-PL-B | DRIP PAN HANDLE BRASS |
| 9 | 92012 | BRACKET PIPE HOLDER |

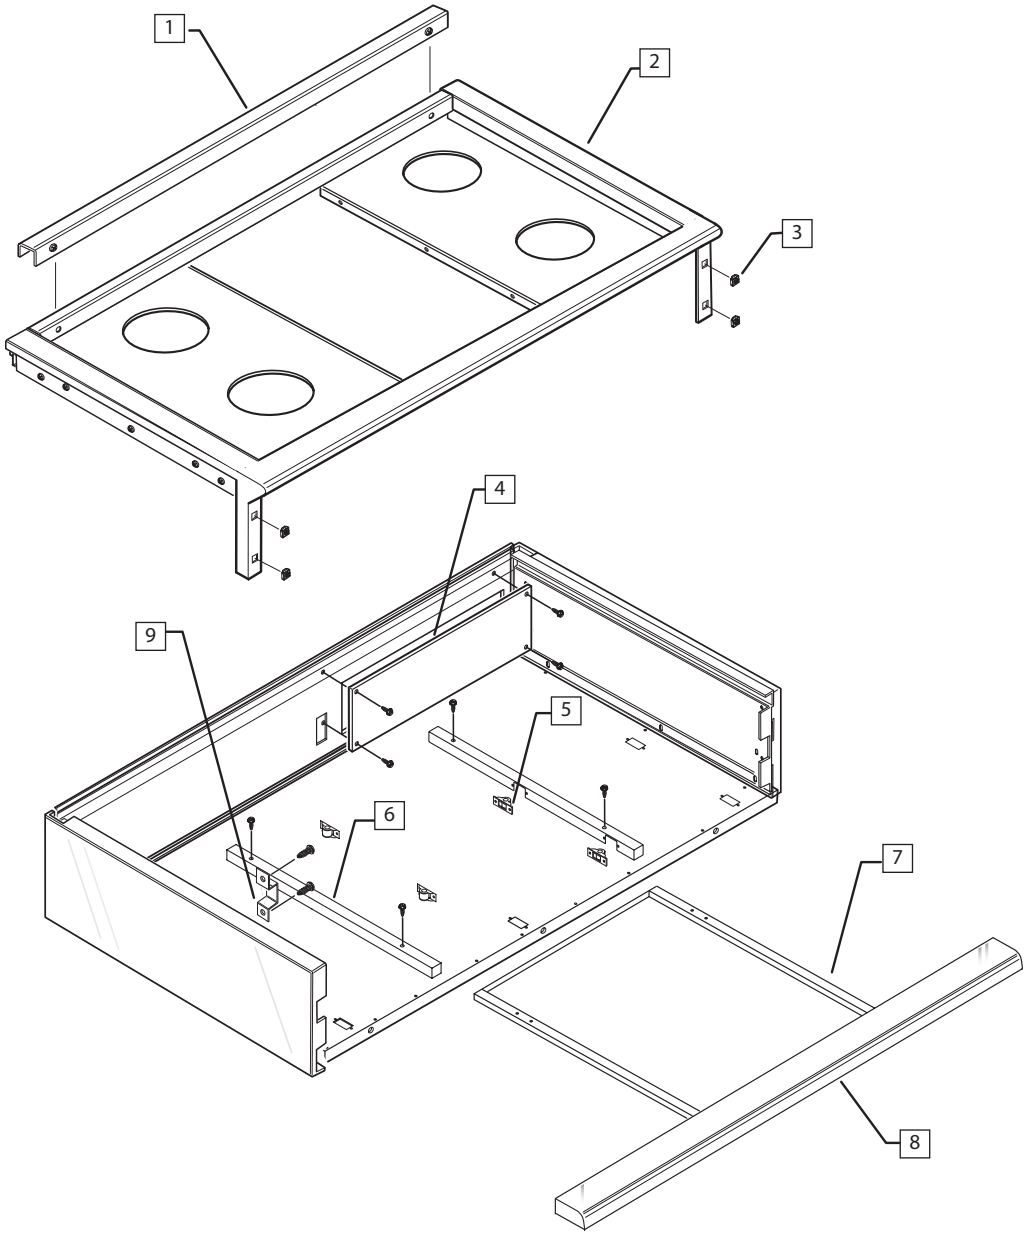

# NOTES

# NOTES

# NOTES

PERFECT HEAT.

5800 Skylab Road, Huntington Beach, CA 92647
Tel: 714.372.7000 • Fax: 714.372.7001
Customer Care Center: (888) 281-5698
www.dcsappliances.com

As product improvement is an ongoing process at DCS, we reserve the right to change specifications or design without notice.

P/N 17731-01 Rev. A
Litho in USA 10/2003